

DATASHEET

YASKAWA

CIMR-0.75B.501

上正科技有限公司

購買、維修 此手冊零組件

電話： 037-466333

Email: service@repairtw.com

OTHER SYMBOLS:

Line id: @zzzz

www.repairtw.com

RGB ELEKTRONIKA AGACIAK CIACIEK
SPÓŁKA JAWNA

Jana Długosza 2-6 Street
51-162 Wrocław
Poland

✉ biuro@rgbelektronika.pl

☎ +48 71 325 15 05



www.rgbelektronika.pl




www.rgbautomatyka.pl

YOUR PARTNER IN MAINTENANCE

Repair **this product** with RGB ELEKTRONIKA

[ORDER A DIAGNOSIS »](#)

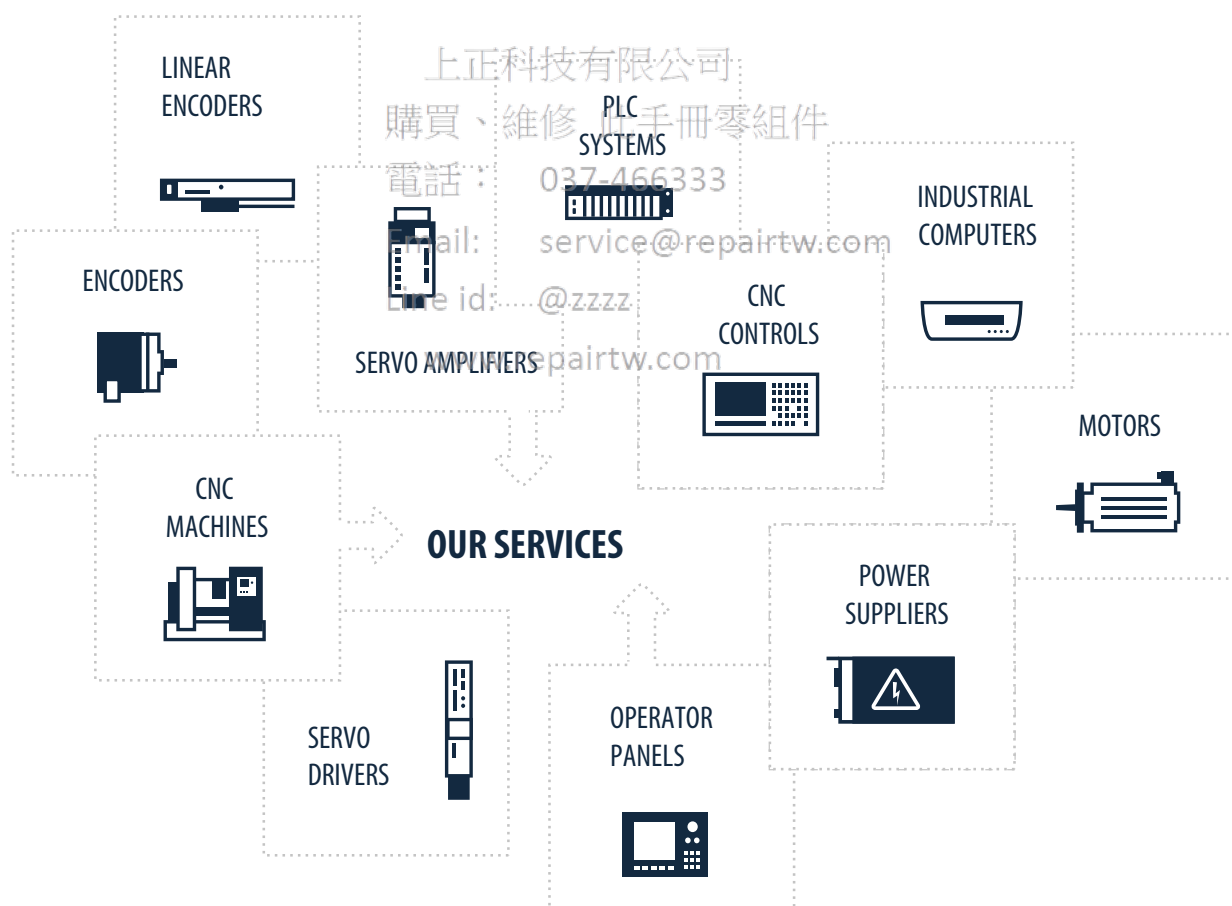

At our premises in Wrocław, we have a fully equipped servicing facility. Here we perform all the repair works and test each later sold unit. Our trained employees, equipped with a wide variety of tools and having several testing stands at their disposal, are a guarantee of the highest quality service.

Buy **this product** at RGB AUTOMATYKA

[BUY »](#)



TOE-S616-40 1D

TRANSISTOR INVERTER

Varispeed™-616HII

200 TO 230 V 0.4 TO 7.5 kW (0.5 TO 10 HP) 1 TO 10 kVA

INSTRUCTION MANUAL

Before initial operation
read these instructions
thoroughly and retain
for future reference

When properly installed, operated and maintained, this equipment will provide a lifetime of service. It is mandatory that the person who operates, inspects, or maintains this equipment thoroughly read and understand this manual, before proceeding.

This manual applies to VS-616HII Model CIMR-0.4B, -0.75B, -2.2B, -3.7B, -5.5B, and -7.5B.


The VS-616HII Drive is an AC variable speed drive system for high-precision variable speed applications. It basically consists of a three-phase squirrel-cage induction motor, a VS-616HII controller (VS-616HII), an operator control station, and optional control units. This manual primarily describes VS-616HII, but contains basic information for operator control station as well. For details of the operation of individual units, refer to their respective manuals.

service@repairtw.com

Line id: @zzzz

www.repairtw.com

685-158

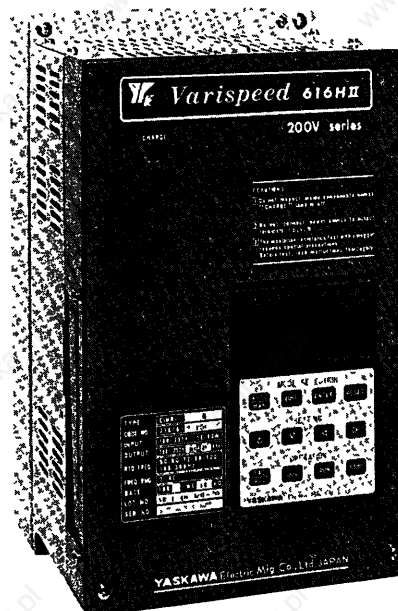

VS 616 HII Inverter
with Digital Operator (Optional)

CONTENTS

1. RECEIVING	5
2. VS-616HII FUNCTIONAL DESCRIPTION	6
2.1 VS-616HII Functional Block Diagram and Major Control Component Layout	6
2.2 Circuit Operational Description	8
2.2.1 Main Circuit	8
2.2.2 Control Circuit	8
2.2.3 Protective Circuits	9
3. INSTALLATION	9
3.1 Location	9
3.2 Positioning	10
3.3 Mounting Dimensions	10
4. WIRING	11
4.1 Interconnections	11
4.2 Molded-Case Circuit Breaker (MCCB) and Power Supply Magnetic Contactor (MC)	12
4.3 Surge Absorber	12
4.4 Wire Size	12
4.5 Wiring Instructions	13
4.5.1 Control Circuit	13
4.5.2 Main Circuit Input/Output	13
4.5.3 Grounding	14
5. TEST RUN	15
5.1 Checks Before Test Run	15
5.2 Presetting and Adjustment Before Test Run	15
5.3 Trial Operation/Test Run	21
5.3.1 Use of Analog Operator Model JVOP-72 (optional)	22
5.3.2 Use of Digital Operator Model JVOP-71 (optional)	23
5.3.3 Use of VS Operator Model JVOP-65 (optional)	24
5.4 Frequency Meter Calibration	25
6. OPERATION AT LOAD	25
7. MAINTENANCE	26
8. FAILURE INDICATION AND DETAILS	27
9. TROUBLESHOOTING	28
9.1 Measuring Point and Instrument	28
9.2 Troubleshooting for Motor Symptom	29
9.3 Troubleshooting for Failure Indications	31
APPENDIX 1 VS-616HII RATINGS AND SPECIFICATIONS	36
APPENDIX 2 TERMINAL FUNCTIONS	37
APPENDIX 3 INTERNAL CIRCUIT AND INTERCONNECTION DIAGRAMS	38
A3-1 VS-616HII Internal Circuit	38
A3-2 Interconnection Diagrams for VS-616HII Applications	39
APPENDIX 4 VS-616HII OPTIONAL AND AUXILIARY UNITS	48
A4-1 VS-616H Optional Units	48
A4-2 VS-616HII Auxiliary Units	49
APPENDIX 5 CHECKING OF DIODE AND TRANSISTOR MODULES	50
A5-1 Diode Module	50
A5-2 Transistor Module	50
APPENDIX 6 PARTS REPLACEMENT	52
A6-1 Replacement of Control PC Board	52
A6-2 Replacement of Base Drive PC Board	52
A6-3 Replacement of Diode Module and Transistor Module	53
A6-4 Replacement of Cooling Fan	53
APPENDIX 7 RENEWAL PARTS	53

INDEX

Subject	Chapter	Section	Page
A ANALOG OPERATOR MODEL JVOP-72• (OPTIONAL), USE OF	5	5.3.1	22
Auxiliary Units, VS-616H	APPENDIX 4	A4-2	49
B Before Test Run, Checks	5	5.1	15
BLOCK AND INTERCONNECTION DIAGRAMS	APPENDIX 3		38
C Circuit Operational Description of	2	2.2	8
CONTROL CIRCUIT	2	2.2.2	8
Control PC Board, Replacement of	APPENDIX 6	A6-1	52

INDEX (Cont'd)

Subject	Chapter	Section	Page
D Digital Operator Model JVOP-71 (Optional) (Fig. 17), Use of	5	5.3.2 . . .	23
Diode Module	APPENDIX 5 . . .	A5-1 . . .	50
Diode Module and Transistor Module, Replacement of	APPENDIX 6 . . .	A6-3 . . .	52
F FAILURE INDICATION AND DETAILS	8		27
Frequency Meter Calibration	5	5.4 . . .	25
Functional Block Diagram and Major Control Component Layout, VS-616HII	2	2.1 . . .	6
FUNCTIONAL DESCRIPTION, VS-616HII	2		6
I INSTALLATION	3		9
Internal Circuit, VS-616HII	APPENDIX 3 . . .	A3-1 . . .	38
Interconnection Diagrams for VS-616HII Applications	APPENDIX 3 . . .	A3-2 . . .	39
Interconnections	4	4.1 . . .	11
L Location.	3	3.1 . . .	9
M Main Circuit	2	2.2.1 . . .	8
MAINTENANCE	7		26
Measuring Point and Instrument	9	9.1 . . .	28
Molded-Case Circuit Breaker (MCCB) and Power Supply Magnetic Contactor (MC)	4	4.2 . . .	12
Mounting Dimensions	3	3.3 . . .	10
N NOTES FOR OPERATION	6		25
O OPERATION AT LOAD	6		25
OPTIONAL UNITS, AND AUXILIARY UNITS, VS-616HII	APPENDIX 4		48
Optional Units, VS-616HII	APPENDIX 4	A4-1 . . .	48
P PARTS REPLACEMENT	APPENDIX 6		52
Positioning	3	3.2 . . .	10
Protective Circuit	2	2.2.3 . . .	9
R Ratings and Specifications, VS-616HII	APPENDIX 1		36
RECEIVING	1		5
RENEWAL PARTS	APPENDIX 7		54
S Surge Absorber.	4	4.3 . . .	12
T TEST RUN	5		15
Test Run, Presetting and Adjustment before Transistor Module	5	5.2 . . .	15
Trial Operation/Test Run	APPENDIX 5	A5-2 . . .	50
TROUBLESHOOTING	5	5.3 . . .	21
Troubleshooting for Motor Symptom	9		28
Troubleshooting for Failure Indications	9	9.2 . . .	29
		9.3 . . .	31
V VS OPERATOR MODEL JVOP-65. (OPTIONAL) (Fig. 18), USE OF	5	5.3.3 . . .	24
W WIRE SIZE	4	4.4 . . .	12
WIRING	4		11
WIRING INSTRUCTIONS	4	4.5 . . .	13

INDEX OF FIGURES

Fig. 1 VS-616HII Functional Block Diagram	6
Fig. 2 Major Control Component Layout of VS-616HII Model CIMR-7.5B	7
Fig. 3 Accel/Decel Time Setting	8
Fig. 4 Example of V/f Setting	8
Fig. 5 VS-616HII Clearance Requirements for Proper Cooling and Maintenance	10
Fig. 6 Cabinet Mounting Dimensions	10
Fig. 7 Example of VS-616HII Interconnections	11
Fig. 8 Shielded Lead Termination	13
Fig. 9 Grounding of Three VS-616HII Units	14
Fig. 10 Connections for Megger Testing	14
Fig. 11 Accel/Decel Time Set by Notch ① of 2S	17
Fig. 12 ON/OFF Switches of 6S (1 to 8)	20
Fig. 13 Master Frequency Reference Signal Selection	20
Fig. 14 Auxiliary Frequency Reference Signal Selection	20
Fig. 15 Run and Stop Time Chart	21
Fig. 16 Analog Operator (Optional)	22
Fig. 17 Digital Operator (Optional)	23
Fig. 18 VS Operator (Optional)	24
Fig. 19 Exploded View of VS-616HII	26
Fig. 20 Points for Measurement	29
Fig. 21 Output Voltage Measurement	29
Fig. 22 VS-616HII Internal Circuit	38
Fig. 23 With Analog Operator	39
Fig. 24 With Digital Operator	39
Fig. 25 With VS Operator	40
Fig. 26 With User-Arranged Operation Circuit	41
Fig. 27 With Magnetic Contactor for Start/Stop Operation	42
Fig. 28 With VS Operator and Analog Operator	44
Fig. 29 With VS Operator and Digital Operator	45
Fig. 30 With Braking Module and Braking Resistor Unit	46
Fig. 31 With Transistor (Open-collector) for Start/Stop Operation	47
Fig. 32 Control PC Board	52
Fig. 33 Base Drive PC Board	52
Fig. 34 Removing Diode Module and Transistor Module	53
Fig. 35 Cooling Fan Assembly	53

INDEX OF TABLES

Table 1 VS616HII Model Name and Ratings	5
Table 2 Molded-Case Circuit Breakers and Magnetic Contactors	12
Table 3 Surge Absorbers	12
Table 4 Wire Size for Main and Control Circuits	12
Table 5 Round Pressure Terminals	12
Table 6 List of Setting Switches	15
Table 7 V/f Pattern Selection	16
Table 8 Accel/Decel Time Range Setting	17
Table 9 Notch Selection of Electronic Thermal Setting Switch (Use of Standard Motor)	18
Table 10 Notch Selection of Electronic Thermal Setting Switch (Use of VS-616HII Motor)	18
Table 11 Inverter Capacity Selection	18
Table 12 Selection of Operation Modes	19
Table 13 Periodical Inspection	26
Table 14 Failure Indication Analog and Digital Operators	27
Table 15 Failure Indication of VS-616HII	27
Table 16 Measuring Points and Instruments	28
Table 17 VS-616HII Ratings and Specifications	36
Table 18 Terminal Functions and Voltages of Main Circuit	37
Table 19 Terminal Functions and Signals of Control Circuit	37
Table 20 VS-616HII Optional Units	48
Table 21 VS-616HII Auxiliary Units	49
Table 22 Devices of VS Operator Model JVOP-65	49
Table 23 Diode Module Resistances	50
Table 24 Transistor Module Resistances of Model CIMR-0.4B	50
Table 25 Transistor Module Resistances of Model CIMR-0.75B, -2.2B and -3.7B	51
Table 26 Transistor Module Resistances of Model CIMR-5.5B and -7.5B	51
Table 27 Renewal Parts	54

DANGER

- Do not touch circuit components until "CHARGE" lamp is extinguished after turning off the AC main circuit power supply. The capacitors are still charged and can be quite dangerous.
- Before changing switch settings (1S to 6S), turn off the power and make sure that CHARGE lamp is off.
- Do not connect or disconnect wires and connectors while power is applied to the circuit.
- Do not check signals during operation.

IMPORTANT

- Be sure to ground VS-616HII using the ground terminal (E). See par 4.5.3 on page 14.
- Never connect main circuit output terminals (U(T1), V(T2), W(T3)) to AC main circuit power supply.
- All the potentiometers of VS-616HII have been adjusted at the factory. Do not change their settings unnecessarily.
- Do not make withstand voltage test on any part of the VS-616HII unit, because it is electronic equipment using semi-conductors and vulnerable to high voltage.
- To make the insulation resistance test with a megger, special precautions must be taken. Before test, See Insulation Resistance Test on page 14.
- Control PC board employs C MOS IC's which are easily damaged by static electricity. Take care not to touch the C MOS elements inadvertently.

電話 : 037-466333

Email: service@repairtw.com

Line id: @zzzz

1. RECEIVING

www.repairtw.com

This VS-616HII has been put through severe tests at the factory before shipped. After unpacking, however, check and see the following.

- Nameplate ratings meet your requirements. See Table 1.
- Leads and connectors are not disengaged.
- No damage while in transit.
- Bolts and screws are not loose.

If any part of VS-616HII is damaged or lost, immediately notify us giving full details and nameplate data.


Table 1 VS-616HII Model Name and Ratings

VS-616HII Model CIMR-	0.4B	0.75B	2.2B	3.7B	5.5B	7.5B
Max Motor Output kW(Hp)	0.4 (0.5)	0.75 (1)	2.2 (3)	3.7 (5)	5.5 (7.5)	7.5 (10)
Inverter Capacity kVA	1	1.5	3	5	7.5	10

2. VS-616H II FUNCTIONAL DESCRIPTION

2.1 VS-616H II FUNCTIONAL BLOCK DIAGRAM AND MAJOR CONTROL COMPONENT LAYOUT

VS-616H II functional block diagram is shown in Fig. 1 and major control component layout, in Fig. 2.

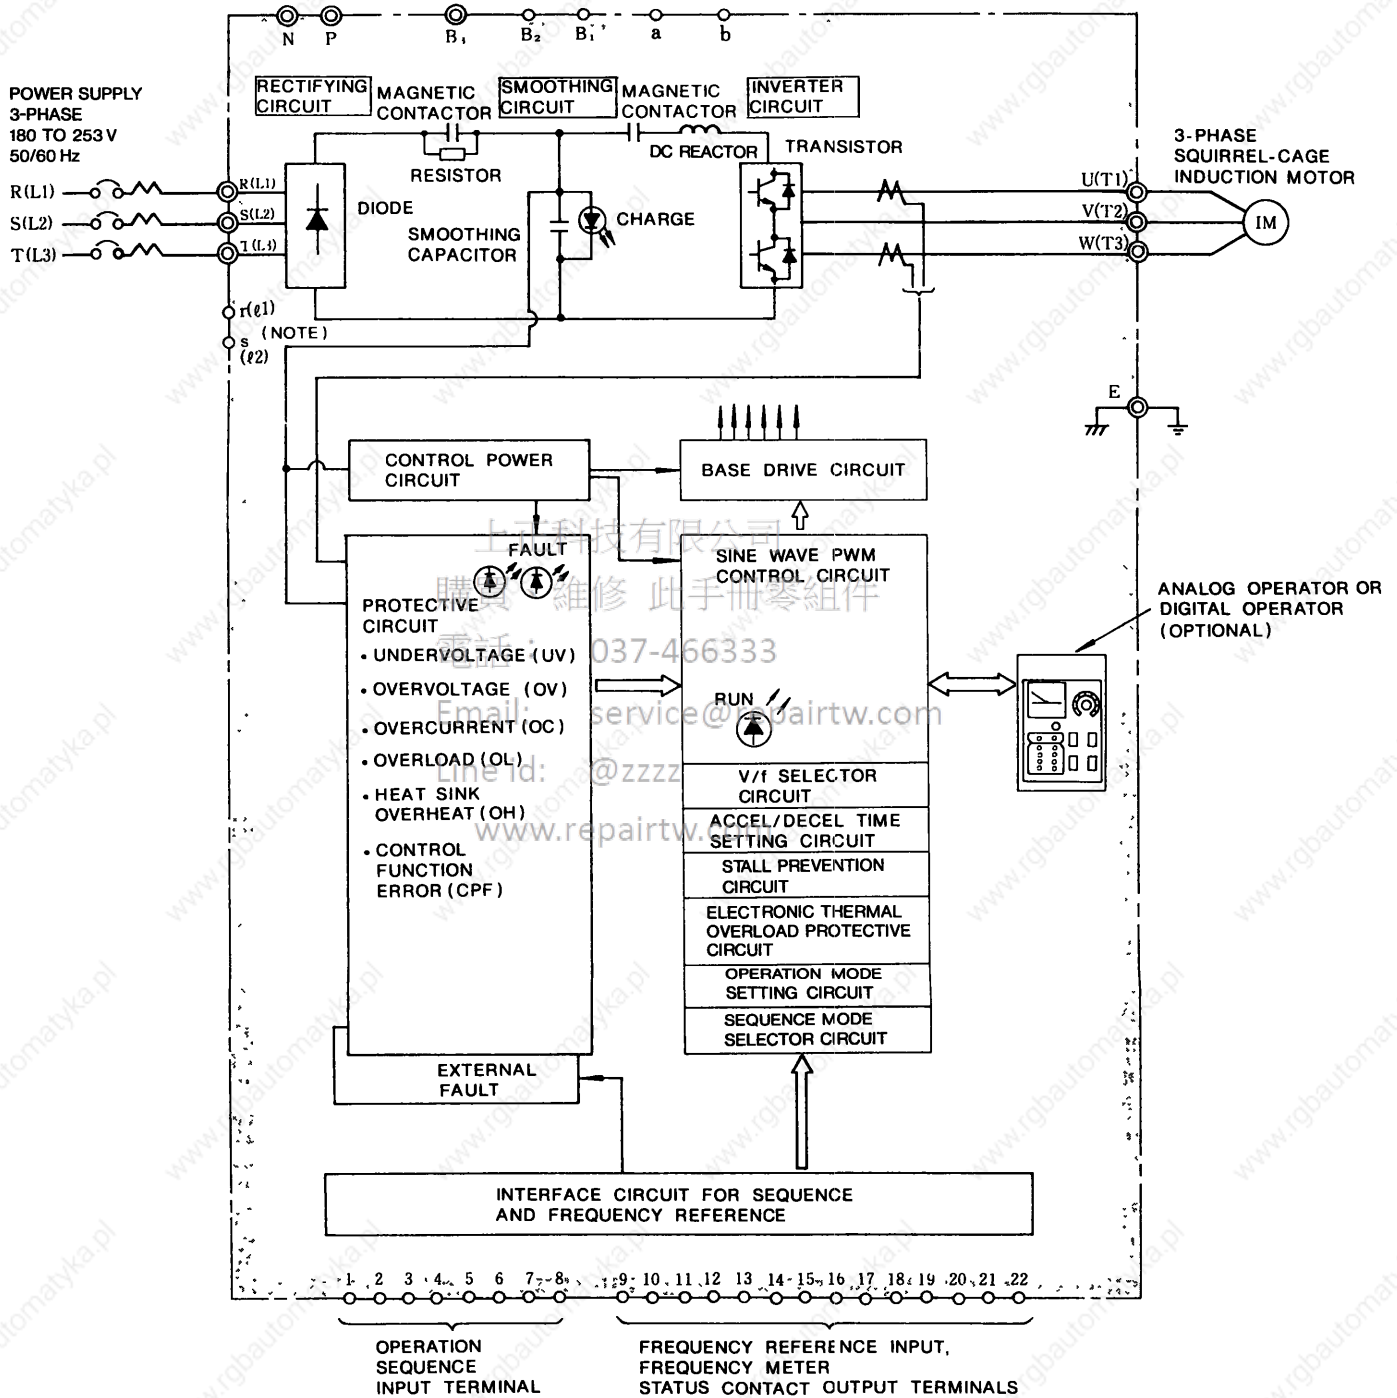

Note Terminals (r)(21) and (s)(22) are not provided with Models CIMR-37 B, -22 B, -075 B, and -04 B

Fig 1 VS-616H II Functional Block Diagram


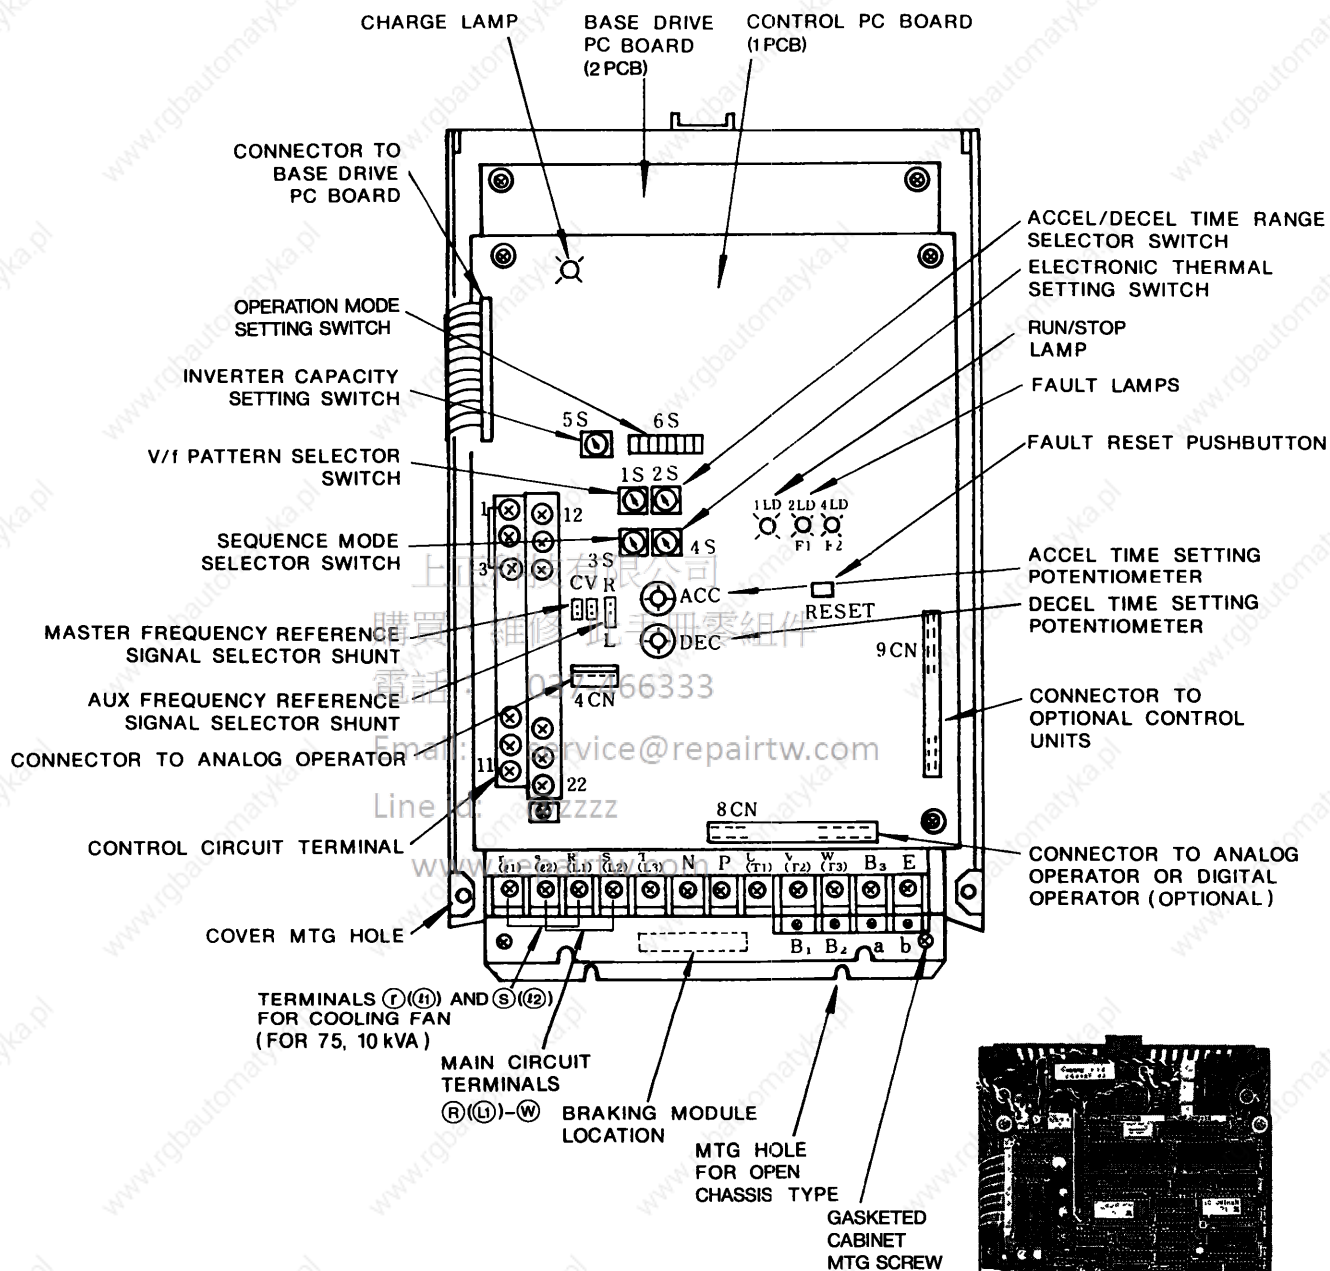


Fig 2 Major Control Component Layout
of VS-616 HII Model CIMR-75 B

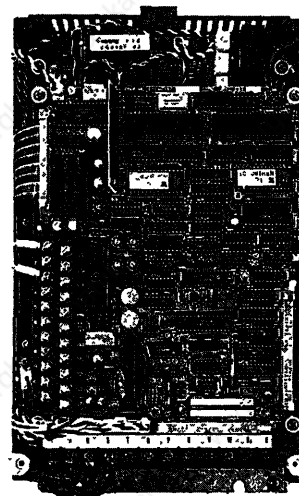

2.2 CIRCUIT OPERATIONAL DESCRIPTION

2.2.1 MAIN CIRCUIT

- (1) Rectifying circuit: Converts three-phase AC inputs through diodes to DC voltage.
- (2) Smoothing circuit: Smooths ripples in DC voltage by means of a capacitor.
- (3) Inverter circuit: Converts DC voltage to AC voltage of a preset frequency by switching six transistors. The output voltage level is controlled by changing the pulse width ratio, thus generating pseudo-sine waves.

2.2.2 CONTROL CIRCUIT

- (1) Base drive circuit: Drives the transistors in the inverter circuit.
- (2) Sine wave PWM control circuit: Calculates the pulse width every time a reference signal is received from the V/f control circuit, and outputs a PWM signal approximating a sine wave.
- (3) V/f selector circuit: Selects V/f pattern from 15 types of built-in voltage/frequency (V/f) patterns (Fig. 3).
- (4) Acceleration and deceleration time setting circuit: Smoothly changes the output frequency upon a rapid change of the frequency reference signal. Acceleration and deceleration times can be independently set by the acceleration (ACC) and deceleration (DEC) time setting potentiometers (Fig. 4).
- (5) Stall prevention circuit
 - During acceleration—Stops acceleration in the event of overcurrent condition and prevent the motor from stopping due to overcurrent. When the current returns to the rated value, acceleration is resumed.
 - During deceleration—Stops deceleration in the event of overvoltage condition and prevents the motor from stopping due to overvoltage. When the voltage returns to the rated value, deceleration is resumed.
 - In constant-speed operation—Reduces motor speed in the event of overload condition so as to prevent the motor from stopping due to overload. When overload condition is alleviated, motor resumes running at normal speed.

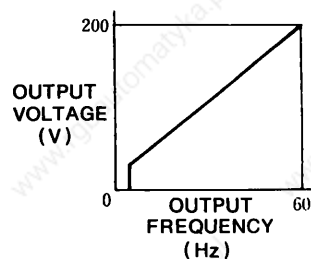


Fig 3 Example of V/f Pattern

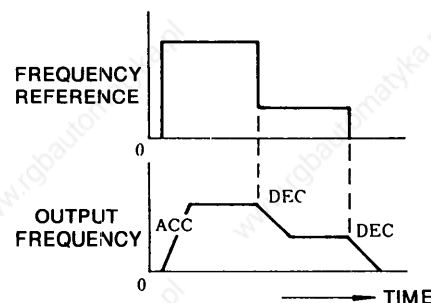


Fig 4 Accel/Decel Time Setting

(6) Operation mode selector circuit: Selects one of eight operation modes individually to tailor the inverter to a specific application.

(7) Sequence mode selector circuit: Selects the optimum function from ten modes, according to the application.

2.2.3 PROTECTIVE CIRCUITS

See 8. Failure Indication and Details on page 26 when protective circuits function.

(1) Undervoltage protective circuit: If the supply voltage drops below a set level or any one of phases is open, the undervoltage protective circuit shuts off the power transistors in the main circuit, and outputs a fault signal (UV operation). With the appropriate operation mode selected, operation can continue if the power is resumed in approximately 2 seconds (operation after momentary power failure).

(2) Overvoltage protective circuit: If the main circuit DC voltage becomes higher than the set level, the overvoltage protective circuit shuts off the power transistors in the main circuit, and outputs a fault signal (OV operation).

(3) Overcurrent protective circuit: If more than 200% of the rated current flow is detected, the overcurrent protective circuit immediately shuts off the power transistors in the main circuit, and outputs a fault signal (OC operation).

(4) Overload protective circuit: When inverter or motor overload is detected by increased motor current, the overload protective circuit shuts off the power transistors in the main circuit after a specified time, and outputs a fault signal (OL operation).

(5) Electronic thermal overload protective circuit: Automatically adjusts protective characteristics to current and time to maximize operating capability.

3. INSTALLATION

3.1 LOCATION

Location of the equipment is important to achieve proper performance and normal operating life. The VS-616HII units should be installed in areas where the following conditions exist.

- Ambient temperature: -10 to +40°C
- Protected from rain or moisture.
- Protected from direct sunlight.
- Protected from corrosive gases or liquids.
- Free from airborne dust or metallic particles.
- Free from vibration.

CAUTION

Never move, lift or handle the VS-616HII cabinet by the front cover.

3.2 POSITIONING

For cooling and maintenance purposes, make sure that there is sufficient clearance around the equipment, as shown in Fig. 5.

To keep effective cooling conditions, it must be installed vertically to the ground using the four mounting screws.


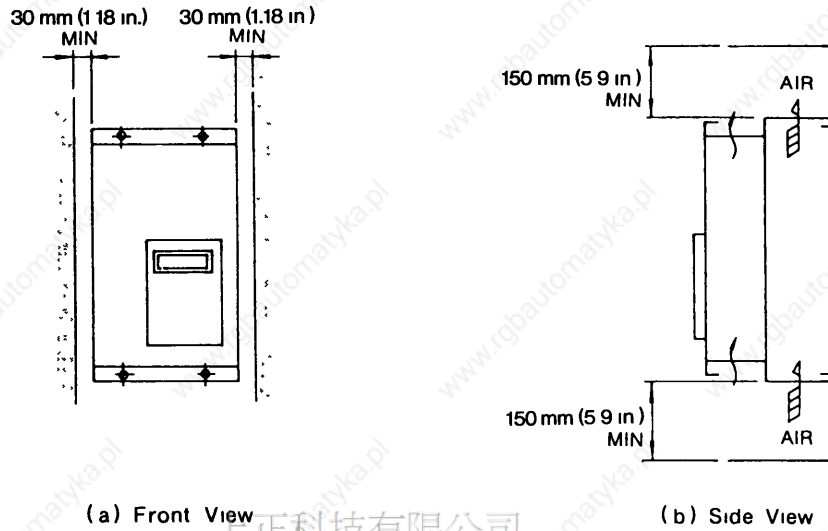


Fig. 5 VS-616H II Clearance Requirements for Proper Cooling and Maintenance

3.3 MOUNTING DIMENSIONS

The mounting dimensions for the VS-616H II are given in Fig. 6.

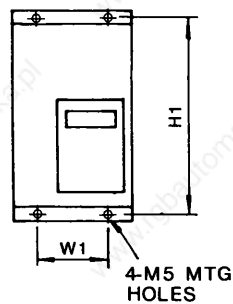

VS-616 H II Model CIMR-	Dimensions in mm(in)					
	0 4 B	0 7 5 B	2 2 B	3 7 B	5 5 B	7 5 B
W1	175 (6 89)				125(4.92)	
H1	290 (11 42)				340(13 39)	


Fig. 6 Cabinet Mounting Dimensions

4. WIRING

4.1 INTERCONNECTIONS

Fig. 7 shows the connection diagram for combination of VS-616HII with VS operator. Remove the front cover before wiring. Connections should be made correctly, referring to Fig. 7.

POWER SUPPLY, 3-PHASE,
200/208/220 VAC, 50 Hz
200/208/220/230 VAC, 60 Hz

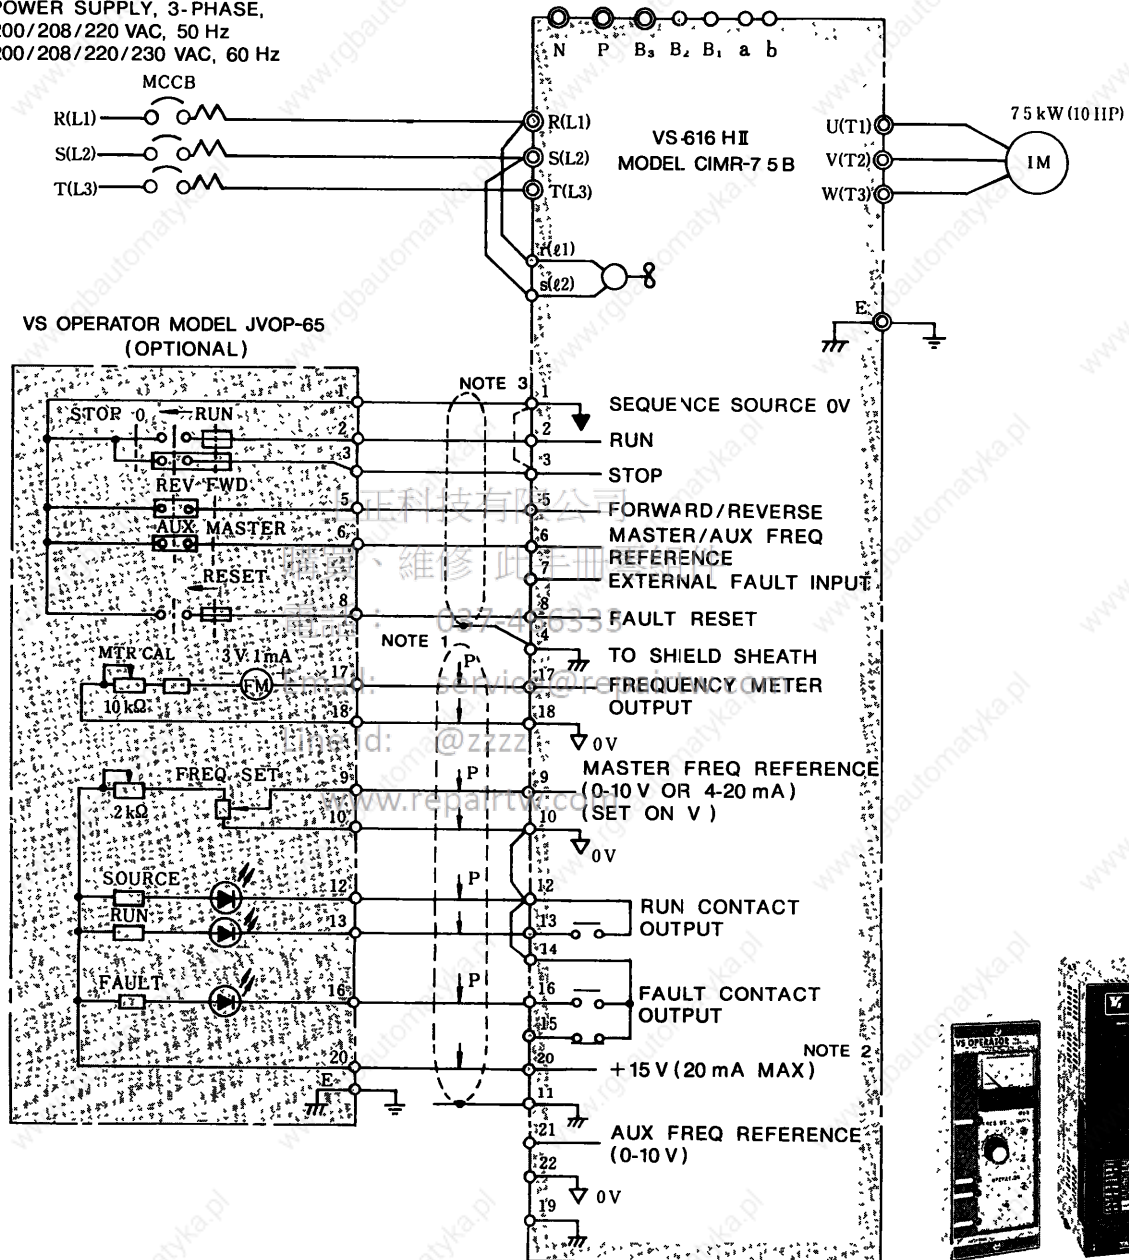

Note

- 1 indicates shielded leads and twisted-pair shielded leads.
- 2 External terminal ② of +15 V has maximum output current capacity of 20 mA. It accommodates a single VS operator, if used.
- 3 When VS operator is used, remove external terminal connections between ① and ③.
- 4 Terminal symbol ② shows main circuit, and ①, control circuit.

NOTE

Be sure to connect a surge absorber to the coils of relays, magnetic contactors, magnetic valves, or magnetic brakes.

Fig. 7 Example of VS-616 HII Interconnections

4.2 MOLDED-CASE CIRCUIT BREAKER (MCCB) AND POWER SUPPLY MAGNETIC CONTACTOR (MC)

Be sure to connect MCCBs between power supply and VS-616HII input terminals (R)(L), (S)(L2), (T)(L3). Recommended MCCBs are listed in Table 2.

When a ground fault interrupter is used to prevent malfunction, setting current should be 200 mA or over and operating time, 0.2 sec or over.

Table 2 Molded-Case Circuit Breakers and Magnetic Contactors

VS-616HII	Model CIMR -	0.4B	0.75B	2.2B	3.7B	5.5B	7.5B
	Capacity kVA	1	1.5	3	5	7.5	10
	Rated Output Current A	3	4.5	9	15	23	30
Molded-Case Circuit Breaker	Rated Current*	5A	10A	20A	30A	50A	60A
Yaskawa Magnetic Contactors Model		HI-7E	HI-7E	HI-10-2E	HI-20E	HI-25E	HI-30E

*Comply with NEMA AB1

4.3 SURGE ABSORBER

For the surge absorbers to be connected to the coils of relays, magnetic contactors, magnetic valves, or magnetic relays, select types from the ones listed in Table 3.

Table 3 Surge Absorbers

Coils of Magnetic Contactor and Control Relay	Surge Absorber*		
	Model	Specifications	Code No
Large-size Magnetic Contactors	DCR2-50A22E	250 VAC 0.5μF+200Ω	C002417
Control Relay LY-2, -3(OMRON) HH-22, -23(Fuji) MM-2, -4(OMRON)	DCR2-10A25C	250 VAC 0.1μF+100Ω	C002482

*Made by MARCON Electronics

4.4 WIRE SIZE

Wire sizes for main and control circuits are listed in Table 4, and Table 5 gives the selection of round pressure terminals according to wire size.

Table 4 Wire Size for Main and Control Circuits

Circuit	VS 616 H II Model CIMR-	Inverter Capacity kVA	Terminal Symbols	Terminal Screw	Wire Size*		Lead Type
					mm ²	AWG	
Main	0.4B	1	(R)(L), (S)(L2), (T)(L3), (U)(T1), (V)(T2), (W)(T3), (N), (P), (E)	M4	2-5.5	14-10	Power Cable 600 V vinyl-sheathed lead or equivalent
	0.75B	1.5					
	2.2B	3	(R)(L), (S)(L2), (T)(L3), (U)(T1), (V)(T2), (W)(T3), (N), (P)	M4	3.5-5.5	12-10	
			(E), (E)		2-5.5	14-10	
	3.7B	5	(R)(L), (S)(L2), (T)(L3), (U)(T1), (V)(T2), (W)(T3), (N), (P)	M4	3.5-5.5	12-10	
			(E), (E)		2-5.5	14-10	
	5.5B	7.5	(R)(L), (S)(L2), (T)(L3), (U)(T1), (V)(T2), (W)(T3), (N), (P)	M5	5.5-8	10-8	
			(E)(H), (S)(L2), (E), (E)	M4	2-5.5	14-10	
	7.5B	10	(R)(L), (S)(L2), (T)(L3), (U)(T1), (V)(T2), (W)(T3), (N), (P)	M5	5.5-8	10-8	
			(E)(H), (S)(L2), (E), (E)	M4	2-5.5	14-10	
Control	—		①-②	M4	0.5-2	20-14	Twisted shielded lead† for instrumentation

*Lead size should be determined considering voltage drop of leads.

†Polyethylene-insulated vinyl-sheathed, with shielding.

Table 5 Round Pressure Terminals

Wire Size		Terminal Screw	Round Pressure Terminal
mm ²	AWG		
0.5	20	M4	1.25-4
0.75	18		
1.25	16		
2	14	M4	2-4
3.5	12	M4	5.5-4
5.5	10		
		M5	5.5-5
8	8	M5	8-5

4.5 WIRING INSTRUCTIONS

4.5.1 CONTROL CIRCUIT

(1) Separation of control circuit leads and main circuit leads

Signal leads ① through ②② must be separated from main circuit leads R(①), S(②), T(③), N, P, U(④), V(⑤), W(⑥), r(⑦), s(⑧) and B₃ to prevent erroneous operation caused by noise interference. If signal leads ⑫ to ⑯ (contact output) are connected to another power supply, separate them from ① to ⑪ and ⑰ to ②②.

(2) Control circuit leads

Use the twisted shielded or twisted-pair shielded lead for the control circuit line and connect the shield sheath to the any of the inverter terminals ④, ⑪, or ⑱. See Fig. 8.

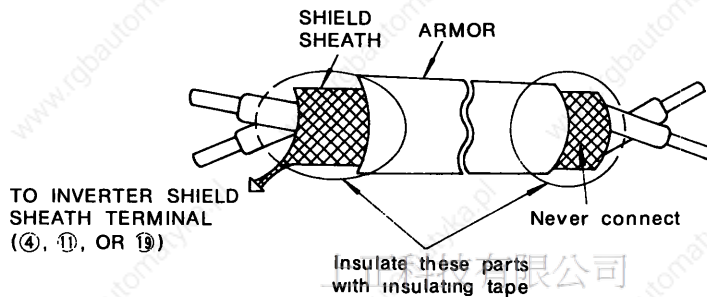


Fig 8 Shielded Lead Termination

(3) Wiring distance

It is recommended that the wiring distance of the signal leads (① - ②②) be 50 meters (164 feet) or below.

4.5.2 MAIN CIRCUIT INPUT/OUTPUT

(1) Direction of phase rotation of power

- Phase rotation of power is available to each direction, clockwise and counterclockwise.
- When inverter output terminals U(④), V(⑤), and W(⑥) are connected to motor terminals U(④), V(⑤), and W(⑥), respectively, motor rotates counterclockwise, viewed from opposite drive end, upon forward operation command. To reverse the rotation interchange any two of motor leads.

(2) Never connect power supply to output terminals U(④), V(⑤), and W(⑥).

(3) Care should be taken to prevent contact of wiring leads with VS-616HII cabinet, for short-circuit may result.

(4) To feed DC power supply from terminals P and N, remove the leads across R(①) and r(⑦), and S(②) and s(⑧). Connect cooling fan power supply (200/230 V, 50/60 Hz; 220/230 V, 60 Hz) across terminals r(⑦) and s(⑧), for Models CIMR-5.5B and -7.5B.

(5) Never connect power factor correction capacitor, noise filter to VS-616HII output.

(6) After completing VS-616HII interconnections, be sure to check that connections are correct. Never use control circuit buzzer check.

Make a positive grounding using ground terminal ⑤ on the casing of VS-616HII.

(1) Ground resistance should be 100Ω or less.

(2) Never ground VS-616HII in common with welding machines, motors, and other large-current electrical equipment, or ground pole. Run the ground lead in a separate conduit from leads for large-current electrical equipment.

(3) Use ground lead listed in Table 3 and make the length as short as possible.

(4) Even when VS-616HII is grounded through its mountings such as channel base or steel plate, be sure to ground VS-616HII using the ground terminal ⑤.

(5) Where several VS-616HII units are used side by side, all the units should preferably be grounded directly to the ground poles. However, connecting all the ground terminals of VS-616HII in parallel, and ground only one of VS-616HII to the ground pole is also permissible (Fig. 9). However, do not form a loop with the ground leads.

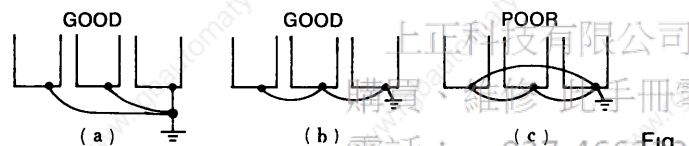


Fig 9 Grounding of Three VS-616HII Units

INSULATION RESISTANCE TEST

For megger-testing the main circuit, measure the insulation resistance with a 500 V megger.

Connect the AC input, output terminals (r(1), s(2), R(L1), S(L2), T(L3), N, P, U(T1), V(T2), W(T3), B₁, B₂, B₃, a, and b) by a common wire, and connect the control terminals ① - ②② (excluding ④, ⑪, ⑱) by a common wire as shown in Fig. 10. After that, measure the insulation resistance between the common wire of input/output terminals and ground with a megger. Never measure the insulation resistance of circuit other than the main circuit (power line). For both the input and output terminals, a reading above 1MΩ is considered satisfactory.

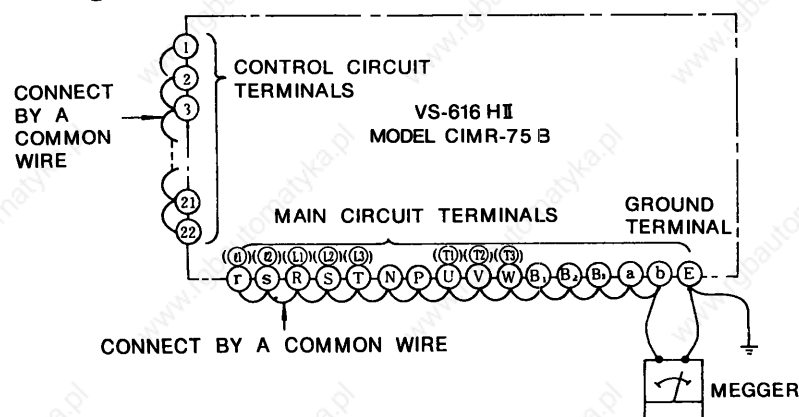


Fig 10 Connections for Megger Testing

5. TEST RUN

5.1 CHECKS BEFORE TEST RUN

After completing mounting and connection of units, check for:

- Correct connections
- No short-circuit conditions
- No loose screw terminals (Check especially for loose wire clippings.)
- Proper load condition

5.2 PRESETTING AND ADJUSTMENT BEFORE TEST RUN










Before setting, be sure to shut off the AC main circuit power and make sure that the CHARGE lamp goes out. If any setting except for accel/decel time is performed with the power on, the following failure indicators will blink:

- FAULT lamp on the inverter
- CPF lamp, if the Analog or Digital operator is used

If any setting is changed during operation, the operation will continue with the setting made before the change. If the VS-616HII is turned off and then on again, it operates with the changed settings.

- The VS operator provides no failure indication for setting with power ON.

Table 6 List of Setting Switches

Switch Name		Symbol	Function	Factory-setting
V/f Pattern Selector Switch		1S 	Selects one of 15V/f patterns to match specific applications.	Notch ①
Accel/Decel Time Setting	Switch	2S 	Selects accel/decel time range (0.2 to 1800 seconds)	Notch ①
	Potentiometer	ACC DEC 	Accel/decel times independently adjustable between the time range selected by 2S.	Scale 5
Sequence Mode Selector Switch		3S 	Selects one of 15 types of sequences according to application requirements. CAUTION Do not tamper with this switch. Any changes or adjustments must be made by the factory.	Notch ①
Electronic Thermal Setting Switch		4S 	Protects motor and inverter from overcurrent conditions if motor capacity is different from inverter capacity.	(See Tables 9 and 10.)
Inverter Capacity Selector Switch		5S 	Set according to inverter capacity. CAUTION Same as for 3S.	(See Table 11.)
Operation Mode Selector Switch		6S 	Selects the operation mode according to specific applications.	OFF
Master Frequency Reference Signal Selector Shunt		C V 	Selects either a current signal (4-20mA) or a voltage signal (0-10V) to feed frequency reference signal at terminal ⑨.	V (Voltage signal)
Auxiliary Frequency Reference Signal Selector Shunt		R  L	Set to input frequency reference at external terminal ⑩. When the Analog operator is used for frequency setting, set the shunt on "L" because signals from external terminal ⑩ are not accepted.	R

5.2 PRESETTING AND ADJUSTMENT BEFORE TEST RUN (Cont'd)

(1) Setting of V/f pattern selector switch (1S)

The V/f pattern selector switch (1S) has been factory-set at the notch ① for most applications. For specific applications such as fans and pumps, high-starting torques, or machine tools, select the optimum V/f pattern for motor running, according to the load characteristics. (See Table 7.)

Table 7 V/f Pattern Selection (Input Supply Voltage 200 V)

Application	Specification	1S Notch	V/f Pattern	Application	Specification	1S Notch	V/f Pattern
General Purpose	50Hz	①		High Starting Torque	50Hz Starting Torque Low	⑧	
	60Hz Saturation	①			50Hz Starting Torque High	⑨	
	50Hz Saturation	②			60Hz Starting Torque Low	A	
	72Hz	③			60Hz Starting Torque High	B	
Variable Output Operation (Fans and Pumps)	50Hz Variable Torque 2	④		Constant Output Operation (Machine Tools)	90Hz	C	
	50Hz Variable Torque 1	⑤			120Hz	D	
	60Hz Variable Torque 2	⑥			180Hz	E	
	60Hz Variable Torque 1	⑦					

Note 1 Take account of the following conditions and others when selecting V/f pattern

- Pattern matching the voltage-frequency characteristic of the motor
- According to the maximum motor speed

2. V/f pattern for high starting torque should be selected for:

- Long wiring distance
- Large voltage drop at start.
- AC reactor connected to input or output of the inverter
- Use of motor of the rating below the max.

For details, contact Yaskawa representative

(2) Setting of acceleration and deceleration times (2S, ACC, DEC)

Set the acceleration and deceleration times using acceleration time range selector switch (2S), and the acceleration (ACC) and deceleration (DEC) time setting potentiometers (Table 8).

2S has been factory-set to notch ①, and the ACC and DEC potentiometers have been individually set to scale 5 (approximately 10 seconds).

Table 8 Accel/Decel Time Range Setting

2S Notch	Accel/Decel Time Setting Range (sec)
①	0.2-6
① (Factory setting)	1.8-18
②	6-60
③	18-180
④	60-600
⑤-⑦	180-1800
⑧	0
⑨	For calibrating freq meter See par. 54 on page 25

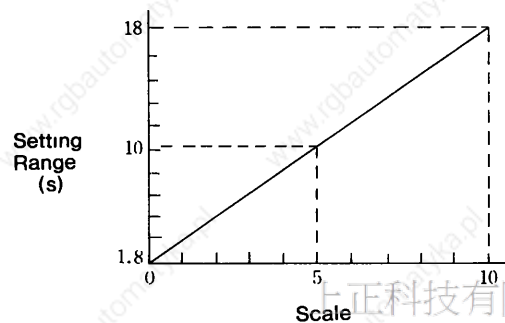


Fig 11 Accel/Decel Time Set by Notch ① of 2S

(3) Selection of sequence mode (3S)

The standard sequence mode selector switch (3S) is paint-locked to notch ①.

Notches ① to ⑦ provide sequences for special applications. For details, contact Yaskawa representative.

(4) Setting of electronic thermal setting switch (4S)

When a motor has a capacity different from the maximum applicable capacity of the inverter, the VS-616H setting must be changed to suit the motor capacity to protect the motor positively. Table 9 on page 18 shows the selections of Yaskawa standard motors (4 poles). The switch has been factory-set to the notch marked off by shading.

When VS-616H motors are used, set the switch (4S) according to Table 10 on page 18. (Notch F inactivates the motor protection by the electronic thermal function.)

5.2 PRESETTING AND ADJUSTMENT BEFORE TEST RUN (Cont'd)

Table 9 Notch Selection of Electronic Thermal Overload Protective Switch
(Use of Standard Motor)

VS-616H II Model CIMR-	kVA	Max Motor Output kW (Hp)						
		0.4 (0.5)	0.75(1)	1.5(2)	2.2(3)	3.7(5)	5.5(7.5)	7.5(10)
0.4B	1	④	—	—	—	—	—	—
0.75B	1.5	①	⑥	—	—	—	—	—
2.2B	3	—	—	③	⑥	—	—	—
3.7B	5	—	—	①	③	⑥	—	—
5.5B	7.5	—	—	—	①	③	⑥	—
7.5B	10	—	—	—	—	①	③	⑥

 Shaded areas show factory-set notches

Table 10 Notch Selection of Electronic Thermal Overload Protective Switch
(Use of VS-616H II Motor)

VS-616H II Model CIMR-	kVA	Max Motor Output kW (Hp)						
		0.4 (0.5)	0.75(1)	1.5(2)	2.2(3)	3.7(5)	5.5(7.5)	7.5(10)
0.4B	1	Ⓑ	—	—	—	—	—	—
0.75B	1.5	Ⓔ	—	—	—	—	—	—
2.2B	3	—	—	Ⓒ	⑨	—	—	—
3.7B	5	—	—	Ⓔ	Ⓒ	⑨	—	—
5.5B	7.5	—	—	—	Ⓔ	Ⓒ	⑨	—
7.5B	10	—	—	—	—	Ⓔ	Ⓒ	⑨

www.repairtw.com

(5) Selection of inverter capacity (5S)

The switch 5S has been factory-set to agree with the inverter capacity as shown in Table 11.

Table 11 Inverter Capacity
Selection

VS-616H II Model CIMR-	kVA	5S Notch
0.4B	1	①
0.75B	1.5	
2.2B	3	②
3.7B	5	③
5.5B	7.5	
7.5B	10	④

(6) Selection of operation modes (6S)

Select the operation modes from Table 12 according to the application, and set the switch (6S) as appropriate. All notches have been factory-set to OFF (□).

Table 12 Selection of Operation Modes

6S Notch	Function	ON/OFF Setting	Description of Operation Mode
①	Dynamic Braking (DB)	OFF	The motor is decelerated until it reaches 1/40 rated speed with the frequency reduced, and DB operation is performed at the speeds less than 1/40 rating.
		ON	The motor is decelerated until it reaches 1/40 rated speed with the frequency reduced, and is coasting to a stop
②	Stopping	OFF	The motor stops in the mode set by notch ① of 6S when a STOP command is input.
		ON	The motor is coasting to a stop when a STOP command is input ignoring 6S setting of notch ①
③	Stall Prevention during Deceleration	OFF	Too high load GD ² during deceleration activates stall prevention function and extends the set decel time
		ON	Stall prevention function during deceleration not provided.
④	Stopping Free-run Motor	OFF	DB operation is not applied at the start
		ON	Motor starts after DB operation is applied (DB operation within 1/5 decel time)
⑤	Operation Continuation after Momentary Power Failure	OFF	Motor coasts to a stop after momentary power failure
		ON	Motor resumes running after momentary power failure of approximately 2 seconds or less; it coasts to a stop more than 2 seconds of momentary power failure.
⑥	Operation Continuation after Momentary Power Failure* (When notch ⑤ of 6S is ON)	OFF	Restarts operation after motor residual voltage is reduced upon recovery from momentary power failure.
		ON	Immediately restarts operation upon recovery from momentary power failure.†
⑦	Jogging	OFF	Full-voltage operation is performed at 1/10 rated speed when jog command is input
		ON	Frequency acceleration and deceleration is performed at 1/10 rated speed when jog command is input
⑧	Supply Voltage	OFF	200 to 230 V.
		ON	380 to 460 V


*Speed search function starts when motor speed is decreased due to momentary power failure and load current.

† OC (overvoltage) protective circuit may be activated according to power recovery timing and load conditions.

AC reactor should be connected or an inverter one size larger than specified should be selected.

5.2 PRESETTING AND ADJUSTMENT BEFORE TEST RUN (Cont'd)


Fig. 12 ON/OFF Switches of 6S (1 to 8)

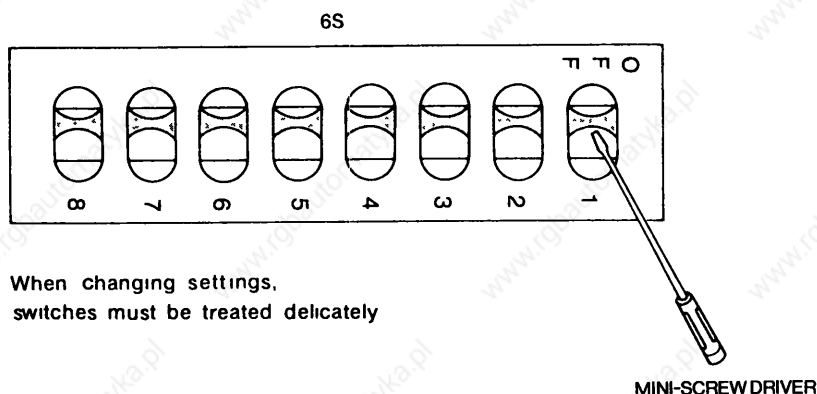

(7) Selection of master frequency reference signal

When the frequency reference signal is input from input terminal ⑨, select either a current signal (4 to 20 mA) or a voltage signal (0 to 10 V) (Fig. 13). The voltage reference signal (V) is factory-selected.

Fig. 13 Master Frequency Reference Signal Selection

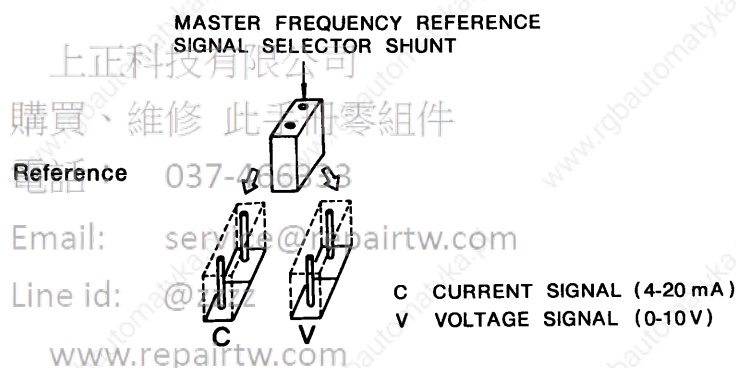


(8) Selection of auxiliary frequency reference signal

When the Analog operator (optional) is not used, input terminal ⑳ can be used for frequency setting. The auxiliary frequency reference signal selector shunt must be set as illustrated in Fig. 14.

The shunt is factory-set to (L) for use with Analog operator, and to (R) for other applications.


Fig. 14 Auxiliary Frequency Reference Signal Selection

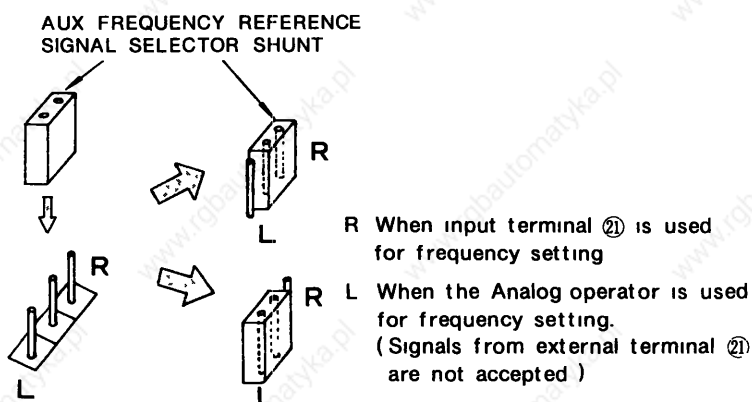

(9) Radio noise reducing filter selection

Radio noise reducing filter is incorporated. If ground fault breaker trips, remove the short-circuit lead across terminals E_N and E .

Ground circuit is disconnected and erroneous operation is prevented.

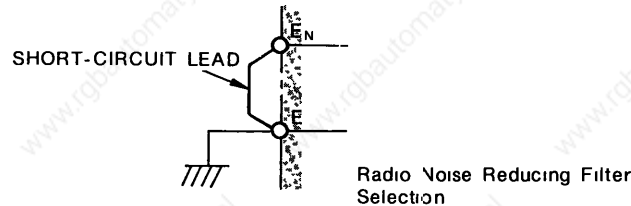

5. 3 TRIAL OPERATION/TEST RUN

Whenever possible, uncouple the motor from the driven machine. If the motor must be rotated with the driven machine connected, make sure that all dangerous conditions have been eliminated.

Fig. 15 shows the run-stop time chart when notches ① and ② of operation mode setting switch 6S are set to OFF.

Test run procedure is given in three ways (use of Analog operator, Digital operator, and VS operator). If any fault occurs, isolate the trouble spot, referring to par. 9 Troubleshooting.

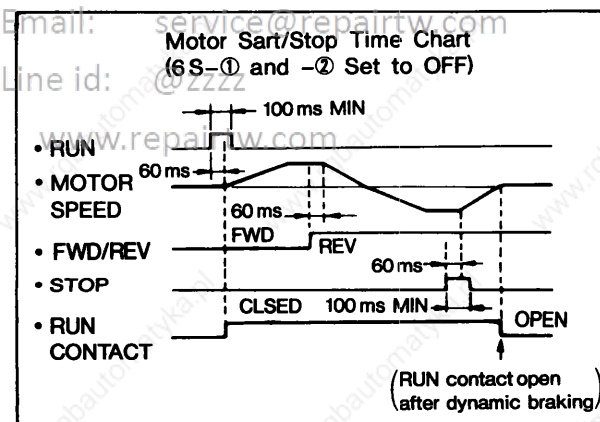


Fig 15 Run and Stop Time Chart

5.3.1 Use of Analog Operator Model JVOP-72 (Optional)

1. Set the AUTO/MAN switch to MAN, move the FWD/REV switch to FWD, and turn the FREQ SET potentiometer fully counterclockwise to LOW.
2. Turn on the VS-616H AC main circuit power (circuit breaker). The STOP lamp (orange) lights.
3. Move the RUN/STOP switch to RUN with the FREQ SET potentiometer at LOW. It causes the RUN lamp (green) to light.
4. Slowly turning the FREQ SET potentiometer clockwise starts running the motor, with the frequency meter reading the output frequency. Make sure that the motor is running forward. If shaft rotation is incorrect, turn off AC main circuit power, and reverse any two of motor leads U(T1), V(T2), W(T3).
5. By turning the FREQ SET potentiometer slowly clockwise or counterclockwise, the motor accelerates or decelerates smoothly. Set the maximum motor speed by turning the FREQ SET potentiometer fully clockwise to HIGH and check the motor for normal running. After this check, return the FREQ SET potentiometer fully counterclockwise to LOW.
6. To stop the motor, set the RUN/STOP switch to STOP, and the STOP lamp comes on.

上正科技有限公司

PRESET START

To make the preset start (a "one-touch" operation at a preset frequency), use steps 1 to 2 mentioned above and then proceed as follows.

(a) Set the frequency using frequency setting potentiometer. Move the RUN/STOP switch to RUN, and the motor accelerates within the time set in par. 5.2 (2) on page 17, then keeps on running at the preset frequency. If the motor does not run smoothly during acceleration (with the acceleration stall prevention function working), or if any FAULT lamp comes on, the acceleration time is assumed to have been set too short for the load level; extend the acceleration time.

(b) Set the RUN/STOP switch to STOP to stop the motor. The motor decelerates in the time set in par. 5.2 (2) on page 17, then stops. If the motor does not run smoothly during deceleration function working), or if any failure indicator comes on, the deceleration time is assumed to have been set too short for the load level; increase the deceleration time.

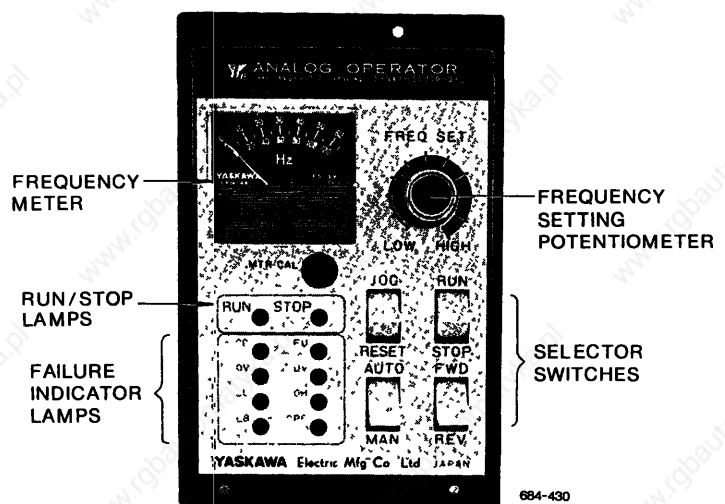


Fig 16 Analog Operator (Optional)

5.3.2 Use of Digital Operator Model JVOP-71 (Optional) (Fig. 17)

1. Turn on the VS-616H AC main circuit power (circuit breaker). Then "AUTO," "MONI," "0.0 Hz," "STOP," and "FWD" are shown on the Digital operator display.
2. Display "MAN" by pressing

AUTO
MAN

 key.
3. Make sure that "FWD" is displayed.
If "REV" is displayed, press

FWD
REV

 key to display "FWD."
4. Confirm that the motor runs forward slowly while

JOG

 key is being pressed. If shaft rotation is incorrect, turn off AC main circuit power, and reverse any two of motor leads. (The jog operation mode outlined in par. 5.2 (6) on page 19 is selected.)
5. Display "REV" by pressing

FWD
REV

 key again, and make sure that the motor runs in reverse direction with JOG key pressed.
6. Pressing

DISP

 key changes "MONI" to "SET," placing the operator in the setting mode. Select a digit to be set by operating

<

 or

>

 key. It is indicated by blinking. Pressing

<

 key moves blinking one space to the left, and

>

 key one space to the right. Set the required frequency by operating

Δ

 or

▽

 . Pressing

Δ

 key increases the blinking value by one, and

▽

 key decreases by one. After finishing the setting, press

ENTER

 key.
7. Pressing

RUN

 key displays "RUN." The motor then accelerates within the preset acceleration time and keeps on running at the frequency set in step 6.
8. To display the output frequency, press

DISP

 key again. "SET" changes to "MONI," and the output frequency appears.
9. Pressing

STOP

 key switches "RUN" to "STOP." The motor then decelerates within the preset deceleration time and stops.

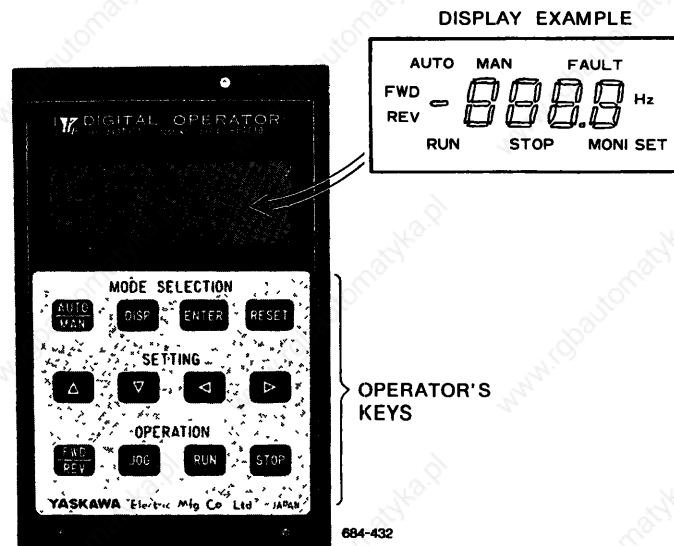


Fig 17 Digital Operator (Optional)

5.3.3 Use of VS Operator Model JVOP-65 (Optional) (Fig. 18)

Complete the connection of units according to example in Fig. 7, on page 11 and perform the test run using the following procedures.

1. Set the MASTER/AUX switch to MASTER, move the FWD/REV switch to FWD, and turn the FREQ SET potentiometer fully counterclockwise to LOW.
2. Turn on the VS-616HII AC main circuit power (circuit breaker), and the SOURCE lamp (green) will light.
3. Change the RUN/STOP switch to RUN with the FREQ SET potentiometer at LOW, and RUN lamp (green) will light.
4. Slowly turning the FREQ SET potentiometer clockwise causes the motor to start running and the frequency meter to indicate the output frequency. Make sure that the motor is running forward. If shaft rotation is incorrect, turn off AC main circuit power, and reverse any two of motor leads $\text{U}(\text{T1})$, $\text{V}(\text{T2})$, $\text{W}(\text{T3})$.
5. By turning the FREQ SET potentiometer clockwise or counterclockwise, the motor accelerates or decelerates smoothly. Also, set the maximum speed of the motor by turning the FREQ SET potentiometer fully clockwise to HIGH, and check the motor for normal running. After this check, return the FREQ SET potentiometer fully counterclockwise to LOW.
6. To stop the motor, set the RUN/STOP switch to STOP, and the RUN lamp goes out after the motor stops.

PRESET START

To make the preset start (a "one-touch" operation at a preset frequency), apply steps 1 to 2 mentioned above and then proceed as follows.

(a) Set the frequency using frequency setting potentiometer. Set the RUN/STOP switch to RUN, and the motor accelerates within the time set in par. 5.2 (2) on page 17, then keeps on running at the preset frequency.

If the motor does not run smoothly during acceleration (with the acceleration stall prevention function working), or if a FAULT lamp comes on, the acceleration time is assumed to have been set too short for the load level; increase the acceleration time.

(b) To stop the motor, change the RUN/STOP switch to STOP. The motor decelerates within time set in par. 5.2 (2) on page 17, then stops. If the motor does not run smoothly during deceleration (with the deceleration stall prevention function working), or if a FAULT lamp comes on, the deceleration time is assumed to have been set too short for the load level; increase the deceleration time.

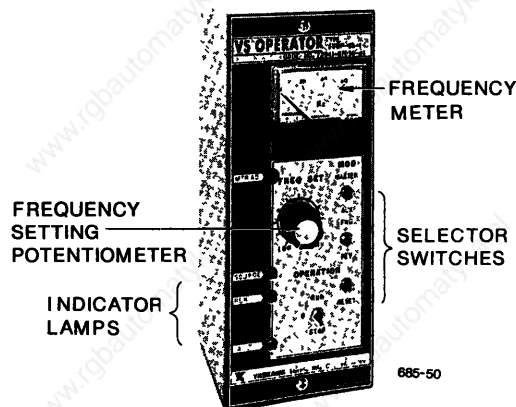


Fig. 18 VS Operator (Optional)

5.4 FREQUENCY METER CALIBRATION

When the Analog or VS operator is used, the frequency meter must be calibrated. The motor need not be run during calibration. Perform the following procedures:

1. Shut off the AC main circuit power.
2. Record the position (notch number) of setting switch 2S on the control PC board.
3. Set 2S to notch ⑤.
4. Turning on the main circuit power causes the meter to indicate approximately the rated frequency.
5. Adjust MTR CAL potentiometer of the Analog operator (or MTR ADJ potentiometer of the VS operator) so that the meter reads the rated frequency.
6. After the adjustment, turn off AC main circuit power again, then return setting switch 2S to the recorded position.

6. OPERATION AT LOAD

After the no-load operation, turn off the AC main circuit power, and connect the driven machine to the motor. Make sure that the driven machine is in running condition, and there is no danger around VS-616HII system, and run the motor under load in exactly the same way as for test run.

PRECAUTION

- (1) Start the motor after making sure that the motor is stopped. If the operation is started during motor coasting, overvoltage (OV) or overcurrent (OC) protective circuit may be operated.
- (2) The motor can be operated by an operation signal from either the inverter-mounted operator or external terminal ②. This selection can be made only when the inverter is standby.
- (3) The motor can be stopped unconditionally by a STOP signal from either the inverter-mounted operator or external terminal ③. Either stop command takes priority over any other command in operation.
- (4) When a standard motor is driven with the inverter, there is a little increase in motor temperature, noise, and vibration as compared to the operation from the commercial power supply.
- (5) The motor cooling effect lowers during low-speed running. The torque needs to be reduced in accordance with the frequency. (For the reduction ratio, refer to the catalog or technical sheet.)
- (6) Even with small load, never use a motor whose current exceeds the inverter rating. When two or more motors are operated, check to be sure that the total motor current is not larger than inverter rating.
- (7) When starting and stopping the motor, be sure to use the operation signals (RUN and STOP), not the magnetic contactor on the power supply side. Exception: If the magnetic contactor is to be used to start and stop a motor, see A3-2, (5) on page 41. Care should be taken not to start and stop the motor frequently.

7. MAINTENANCE

VS-616HII requires almost no routine checks. It will function efficiently and longer if it is kept clean, cool and dry, observing precautions listed in 3.1 Location, on page 9. Especially check for tightness of electrical connections, discoloration or other signs of overheating. Use Table 13 as the inspection guide. Fig. 19 gives the exploded view of VS-616HII to easily identify the components for inspection. Before servicing inspection, turn off AC main circuit power and be sure that CHARGE lamp is off.

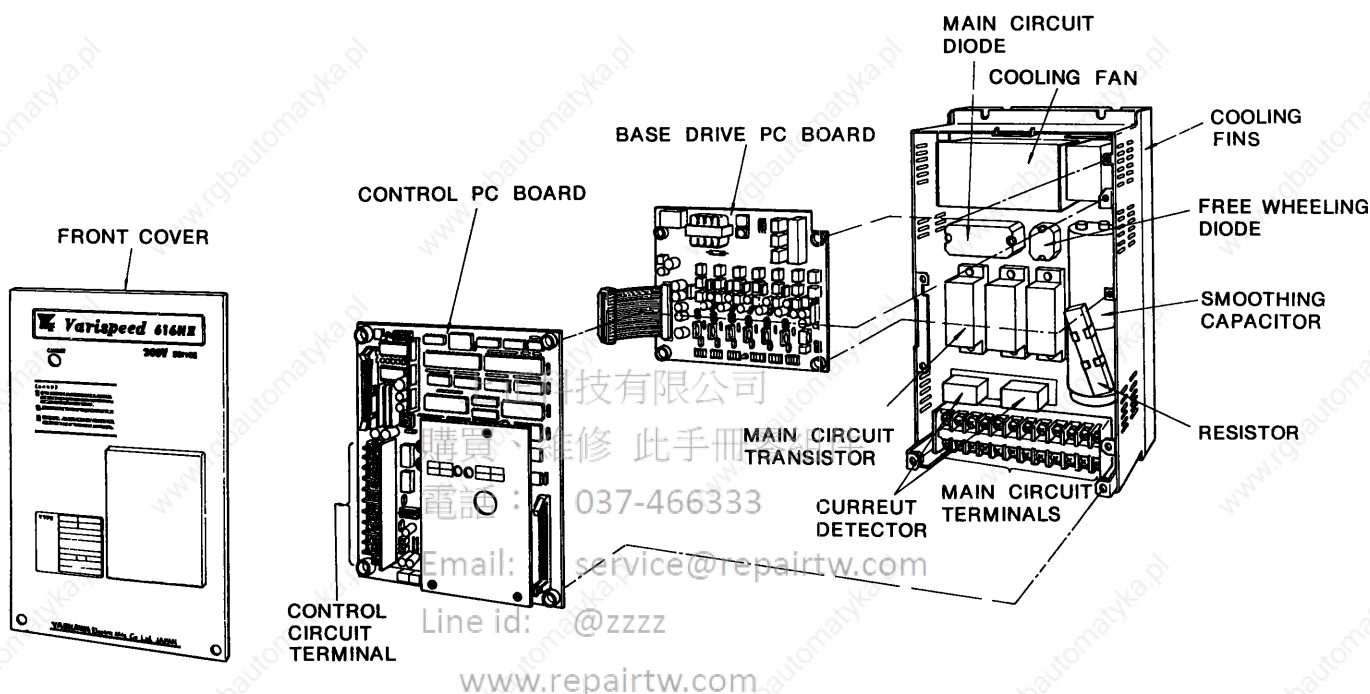


Fig. 19 Exploded View of VS-616 HII

Table 13 Periodical Inspection

Component	Check	Corrective Action
External terminals, unit mounting bolts, connectors, etc.	Loosened screws	Tighten
	Loosened connectors	Tighten
Cooling fins	Build-up of dust and dirt	Blow with a dry compressed air of 4 to 6 kg·cm ² (57 to 85 lbs·in ²) pressure
Printed circuit board	Accumulation of conductive dust and oil mist	Clean the board. If dust and oil cannot be removed, replace the board.
	Discoloration to brown	Replace the board.
Cooling fan (for Models CIMR-5.5B and -7.5B)	For abnormal noise and vibration. Whether the cumulative operation time exceeds 20,000 hours or not.	Replace the cooling fan.
Power elements	Accumulation of dust and dirt	Blow with a dry compressed air of 4 to 6 kg·cm ² (57 to 85 lbs·in ²) pressure
Smoothing capacitor	Discoloration or odor	Replace the capacitor or inverter unit.

8. FAILURE INDICATION AND DETAILS

A failure, if it is detected, can shut off the output power transistor and output FAULT contact signals across control circuit terminals ⑭, ⑮, and ⑯.

When Analog or Digital operator is used, failure indications listed in Table 14 will function. When neither of them is used, failure conditions are shown by FAULT lamps F1 and F2 on the VS-616HII.

Table 14 Failure Indication

Indication	Symptom	VS 616 HII Operation
FU (Fuse Blown)	Main circuit fuse blown	Inverter stops output momentarily (Motor is coasting)
OC (Overcurrent)	More than 200 percent of rated current flow in inverter output side (Instantaneous operation)	
OL (Overload)	Overload of motor and inverter detected by electronic thermal	
OV or OU ^{††} (Overvoltage)	Main circuit DC voltage higher than approx 395 V	
UV* or UU* [†] (Undervoltage)	Main circuit DC voltage lower than approx 210V	
OH (Heat Sink Overheat)	Thermoswitch operated by overheat of heat sink of main circuit semiconductor	
EB or Eb [†] (External Failure)	Fault signal is input from external terminal ⑦	#
CPF Steady (Major Control Function Error)	CPU and major control function error detected by self-diagnostic function	
Blinks (Setting error)	Any one of setting switches (1S to 6S) changed with power ON	#

*In operation continuation after a momentary power failure mode (⑤ notch of 6S ON), UV lamp is flashing for approx two seconds.
[†]For Digital operator display
^{††}FAULT will be displayed with OU on the screen of Digital operator

Inverter continues operation When the setting is returned to the state before change, the display replaces the normal operation status

Table 15 Failure Indication of VS-616 HII

Indication		Cause	
F1	F2		
		FU (Fuse Blown) Main circuit fuse blown	Inverter stops output momentarily (Motor is coasting)
		OC (Overcurrent) More than 200 percent of rated current flow in inverter output side	
		OL (Overload) Overload of motor and inverter detected by electronic thermal overload protective circuit	
		OV (Overvoltage) DC bus voltage higher than 395V	
		UV 1 (Undervoltage) DC bus voltage lower than approx 210V with 6S-⑤ set to ON (F1 blinking for 2 seconds UV 1 indication changed to UV 2)	
		UV 2 (Undervoltage) DC bus voltage lower than 210V	
		OH (Heat Sink Overheat) Thermoswitch operated by overheat of heat sink of main circuit semiconductor	
		EB (External Failure) Fault signal is input from external terminal ⑦	#
		CPF (Control Function Error) Detection of the failure of CPU and main control function by self-diagnostic function	
		CPF SEL (Selection Error) Any one of setting switches (1S to 6S) changed with power ON	#

Note Indication status is as follows

- Light OFF
- Blinking at equal intervals
- Blinking at short-long intervals
- Light ON

Inverter continues operation When the setting is returned to the state before change, the display replaces the normal operation status

9. TROUBLESHOOTING

If the VS-616HII malfunctions, find the cause and take the corrective action by following the flowcharts given in this section.








If the cause cannot still be located by the flowcharts, the inverter or some parts are damaged, or any other problem occurs, contact Yaskawa representative.

9.1 MEASURING POINT AND INSTRUMENT

Since the VS-616HII transistor inverters utilize the PWM control mode, unless specified instruments are used, correct measurement cannot be made.

The measuring points and the measuring instruments are shown in Fig. 20 on page 28 and Table 16.

Table 16 Measuring Points and Instruments

Item	Points	Instrument	Note
Supply Voltage V_1	Across R-S(L1-L2), S-T(L2-L3) T-R(L3-L1) (V_R, V_S, V_T) $(V_{L1-L2}, V_{L2-L3}, V_{L3-L1})$	 Moving-iron type, or rectifier type voltmeter	—
Power Supply Current I_1	Line current R, S, T(L1, L2, L3) (A_R, A_S, A_T) (A_{L1}, A_{L2}, A_{L3})	 Moving-iron type	—
Power Supply Power* P_1	R, S, T(L1, L2, L3) and across R-S(L1-L2), S-T(L2-L3), T-R(L3-L1) (W_R, W_S, W_T) (W_{L1}, W_{L2}, W_{L3})	 Electrodynamometer type, Use 3 identical single-phase meters	$P_1 = W_R + W_S + W_T$
Power Supply Power Factor Pf_1	Calculate from measured supply voltage, supply current, and supply power $Pf_1 = \frac{P_1}{\sqrt{3}V_1I_1} \times 100(\%)$		
Output Voltage V_2	Across U-V(T1-T2), V-W(T2-T3), W-U(T3-T1) (V_U, V_V, V_W) $(V_{T1-T2}, V_{T2-T3}, V_{T3-T1})$	 Rectifier type (YOKOGAWA 2017 or equivalent) Moving-iron type can not be used	1000 V full scale for 400 V circuit
Output Current I_2	Line current at U, V, W(T1, T2, T3) (A_U, A_V, A_W) (A_{T1}, A_{T2}, A_{T3})	 Moving-iron type	—
Output Current P_2	U, V, W(T1, T2, T3) and across U-V(T1-T2), V-W(T2-T3), W-U(T3-T1) (W_U, W_V, W_W) (W_{T1}, W_{T2}, W_{T3})	 Electrodynamometer type, Three identical rating single-phase meters are used	$P_2 = W_U + W_V + W_W$
Output Power Factor Pf_2	Calculated same as power factor on supply side $Pf_2 = \frac{P_2}{\sqrt{3}V_2I_2} \times 100(\%)$		
Frequency Setting Signal	Across ①—⑩ Across ⑪—⑫	 Moving-coil type (Multimeter is OK) (Internal resistance 50 kΩ max)	0 to 10 V DC
Frequency Monitor	Across ⑬—⑭		10 VDC at max frequency (Without frequency meter)

*To measure the power, use the power meter incorporating a hall generator
HIOKI TYPE 3161 Power meter (made by HIOKI Electric, Japan)

The output voltage $U(T1)$, $V(T2)$, $W(T3)$ has been measured with a YOKOGAWA 2017 (moving iron type) voltmeter before shipping.

Fig. 21 on page 28 shows an example of actually measured output voltage. The rectifier type instruments give different readings, depending on type.

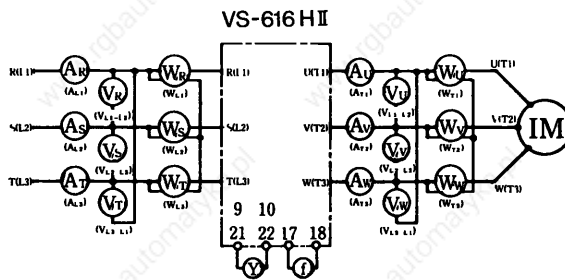


Fig 20 Points for Measurement



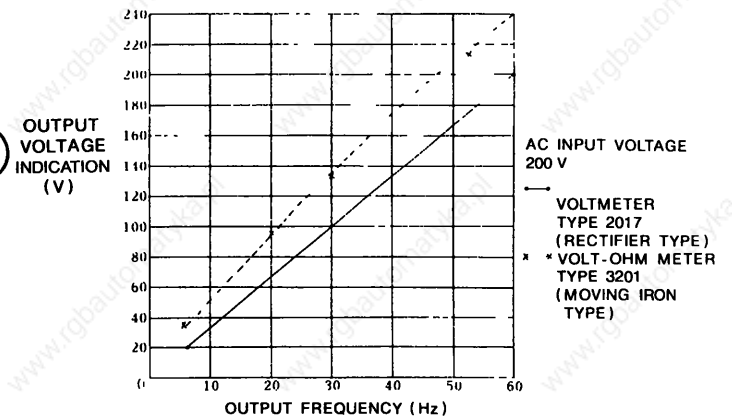


Fig 21 Output Voltage Measurement

9. 2 TROUBLESHOOTING FOR MOTOR SYMPTOM

(1) Motor will not run.


For operation from external command through external terminals (Digital or Analog operator not used)

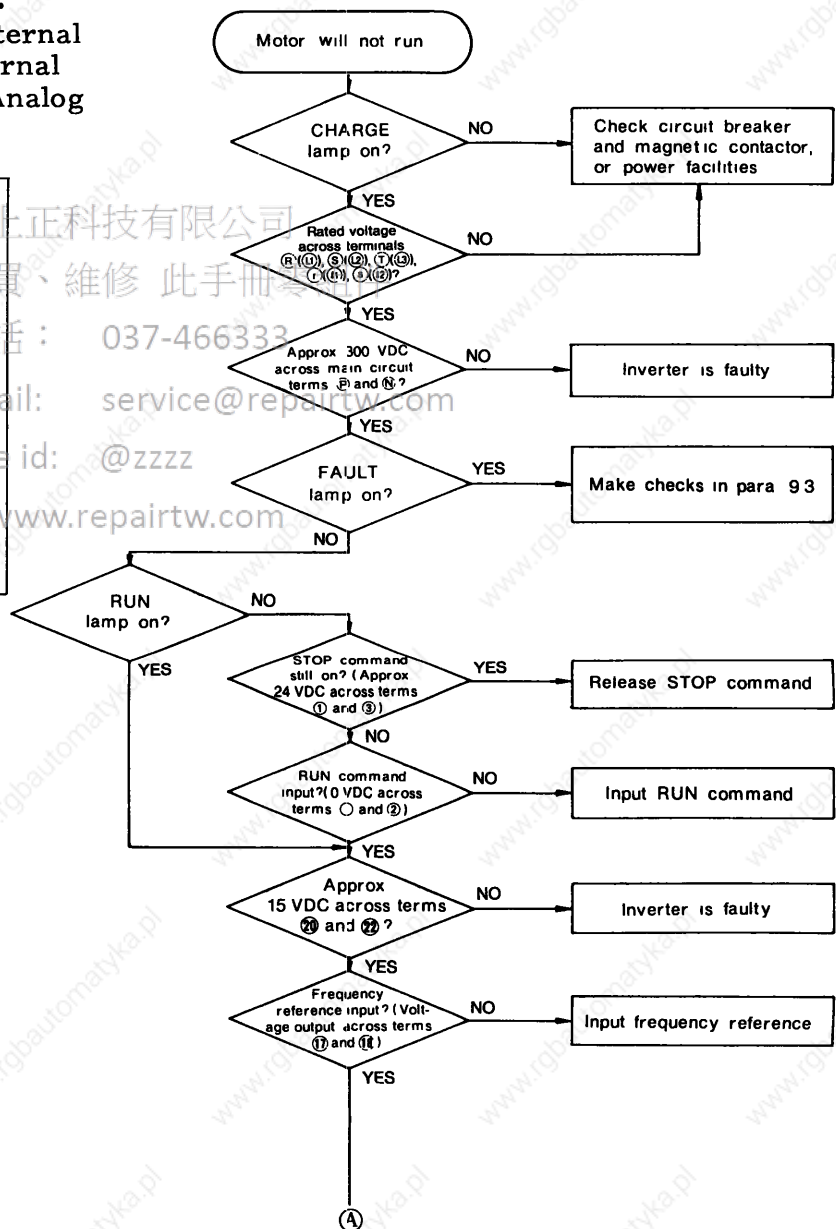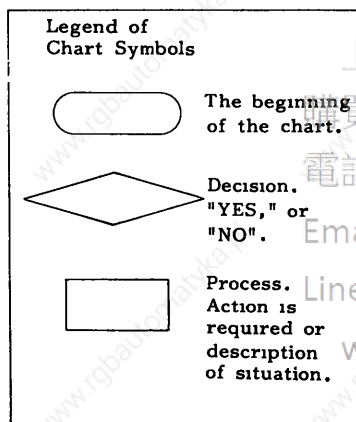


Continued to A on page 30

9. 2 TROUBLESHOOTING FOR MOTOR SYMPTOM (Cont'd)

Continued from (A) on page 29

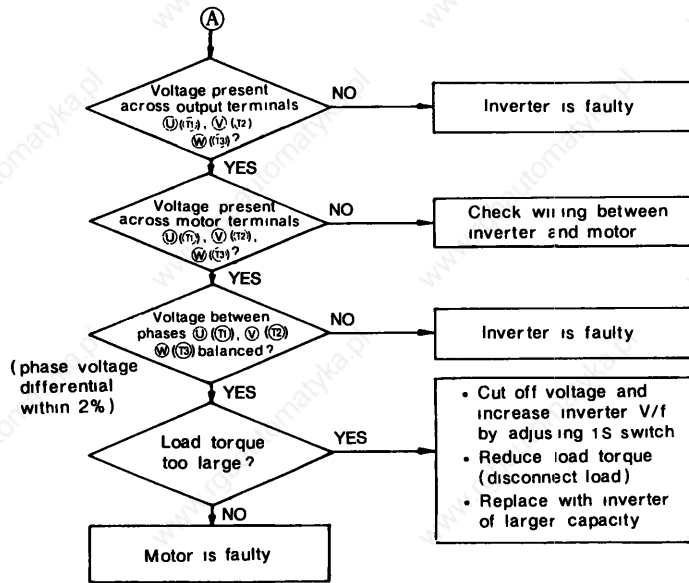

(2) Motor stalls during acceleration

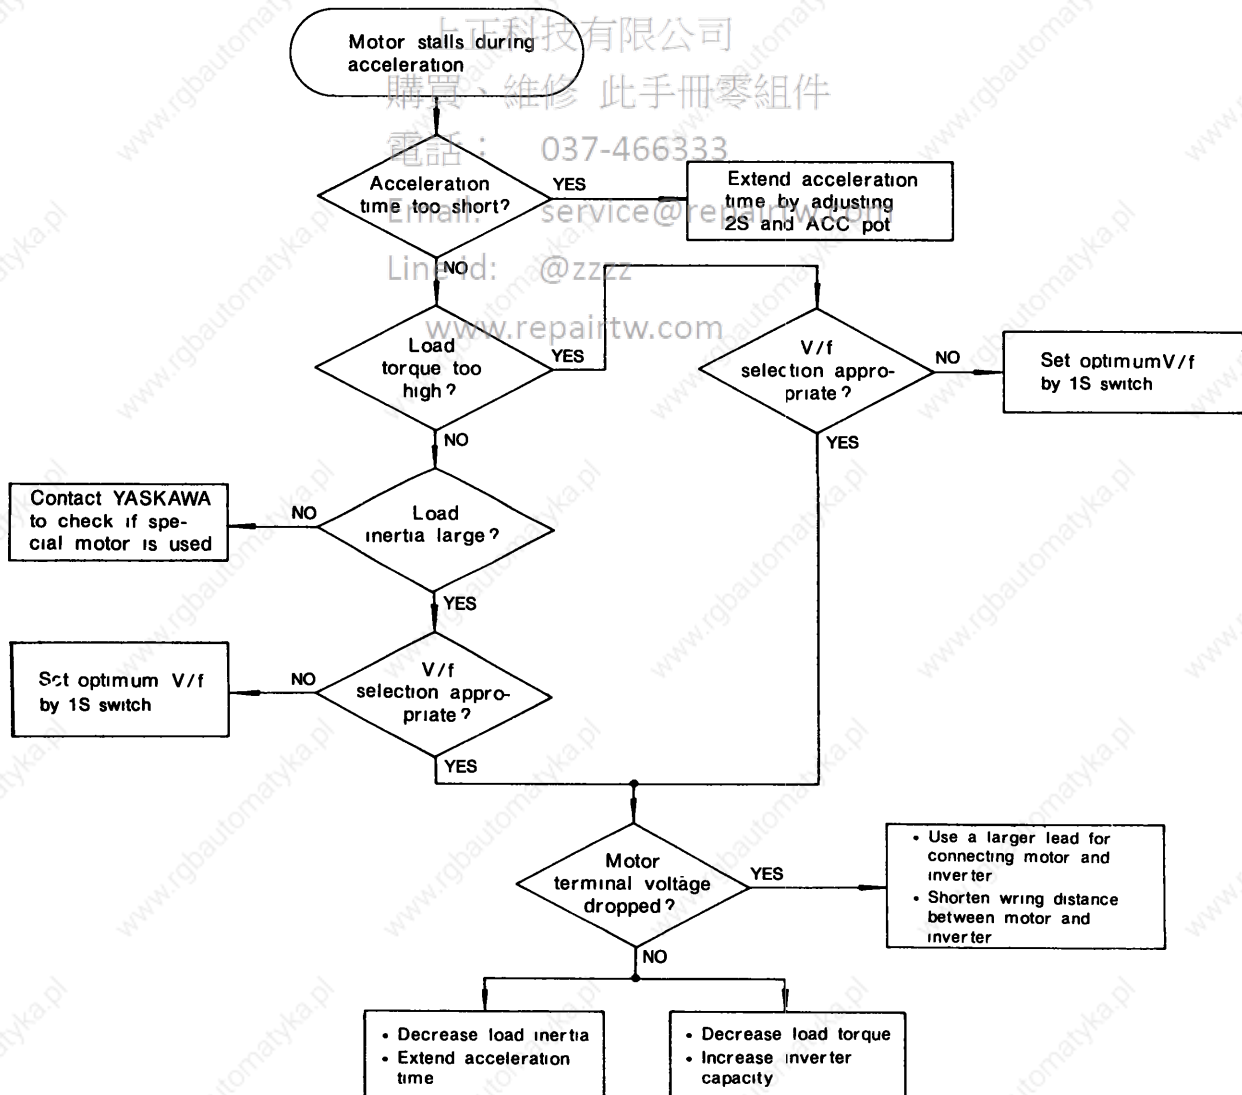


9.3 TROUBLESHOOTING FOR FAILURE INDICATIONS

When the inverter protective function works, the malfunctions are detected by failure indicators. The predictable symptoms are as follows:

- (1) Fuse blown
- (2) Overvoltage of the main circuit DC bus.
- (3) Overcurrents in load.
- (4) Overloaded operation.
- (5) Undervoltage of the main circuit DC bus.
- (6) The inverter overheated.
- (7) The control function went down.
- (8) A fault signal input.


(1) Fuse blow (FU) is turned on:

When the fuse blows, be sure to check the power transistor, even when the cause is on the load side.

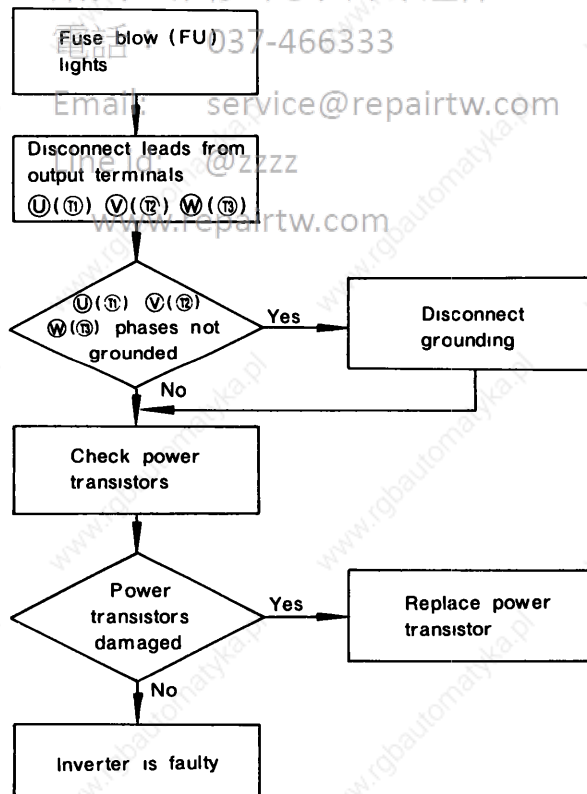


9. 3 TROUBLESHOOTING FOR FAILURE INDICATIONS (Cont'd)


(2) Overvoltage (OV) indication

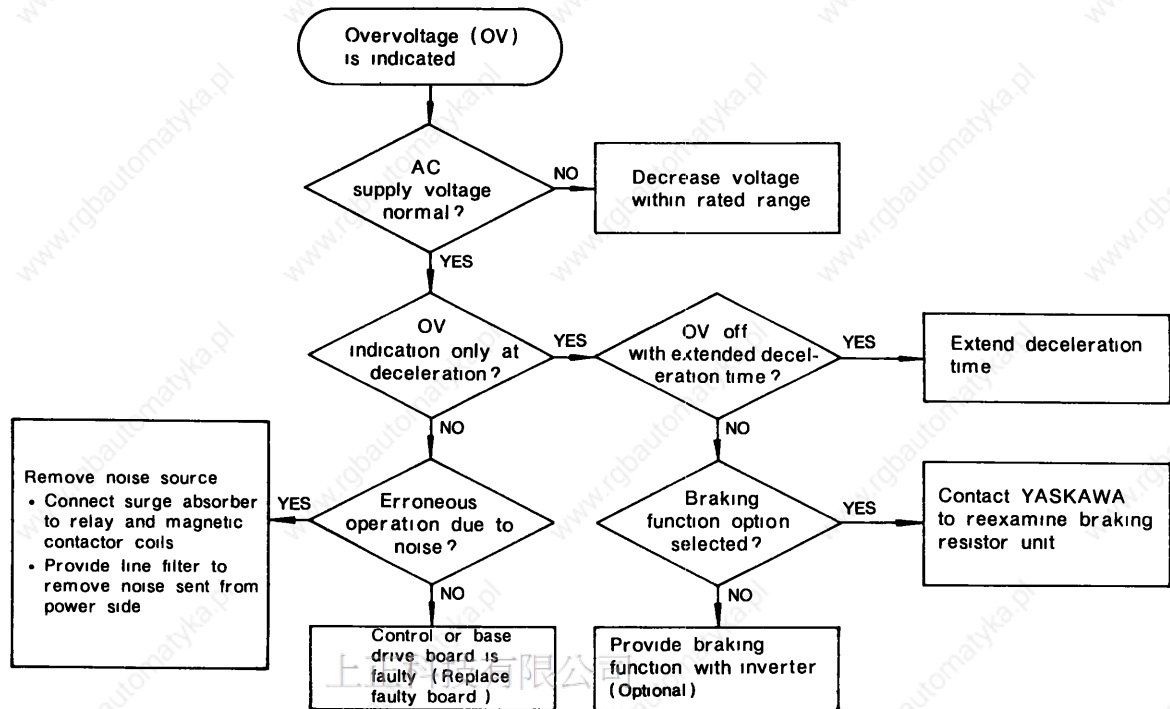

(3) Overcurrent (OC) indication

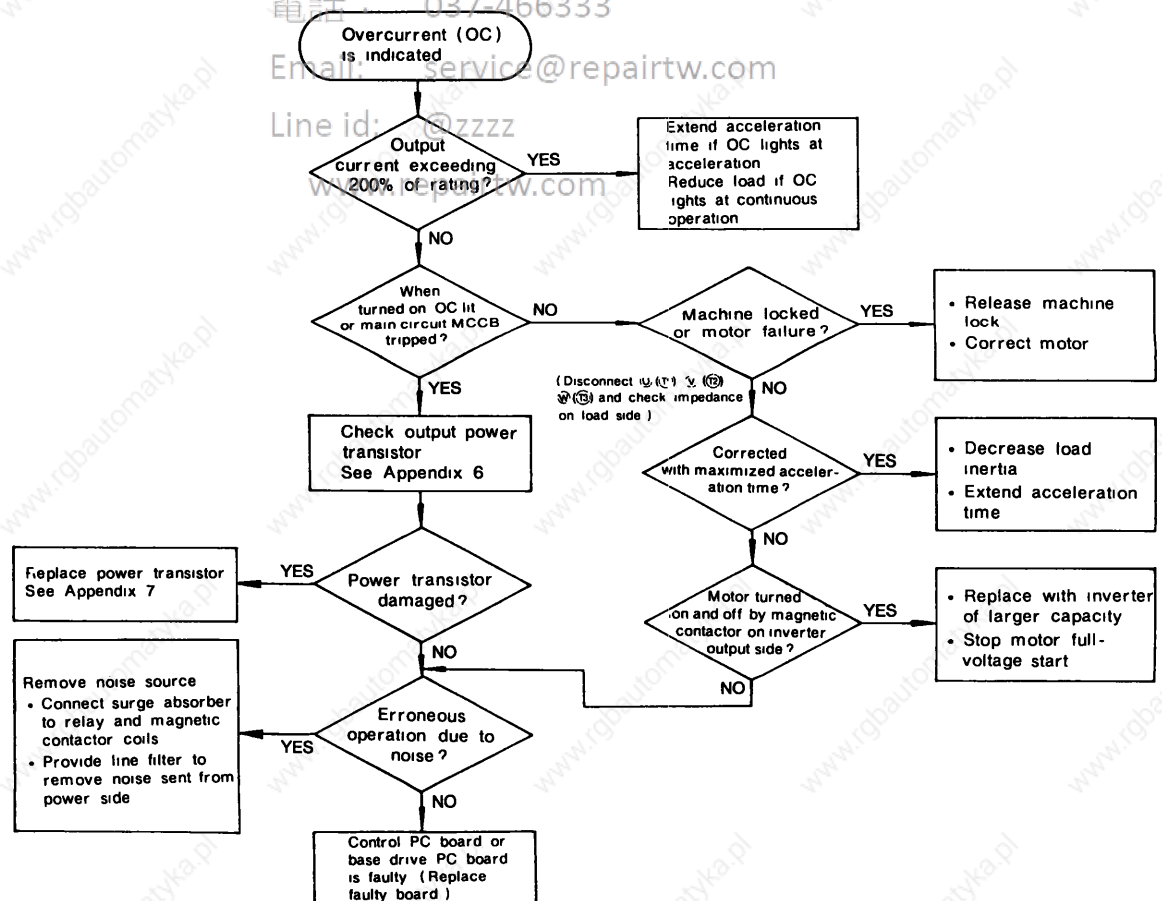


(4) Overload (OL) indication

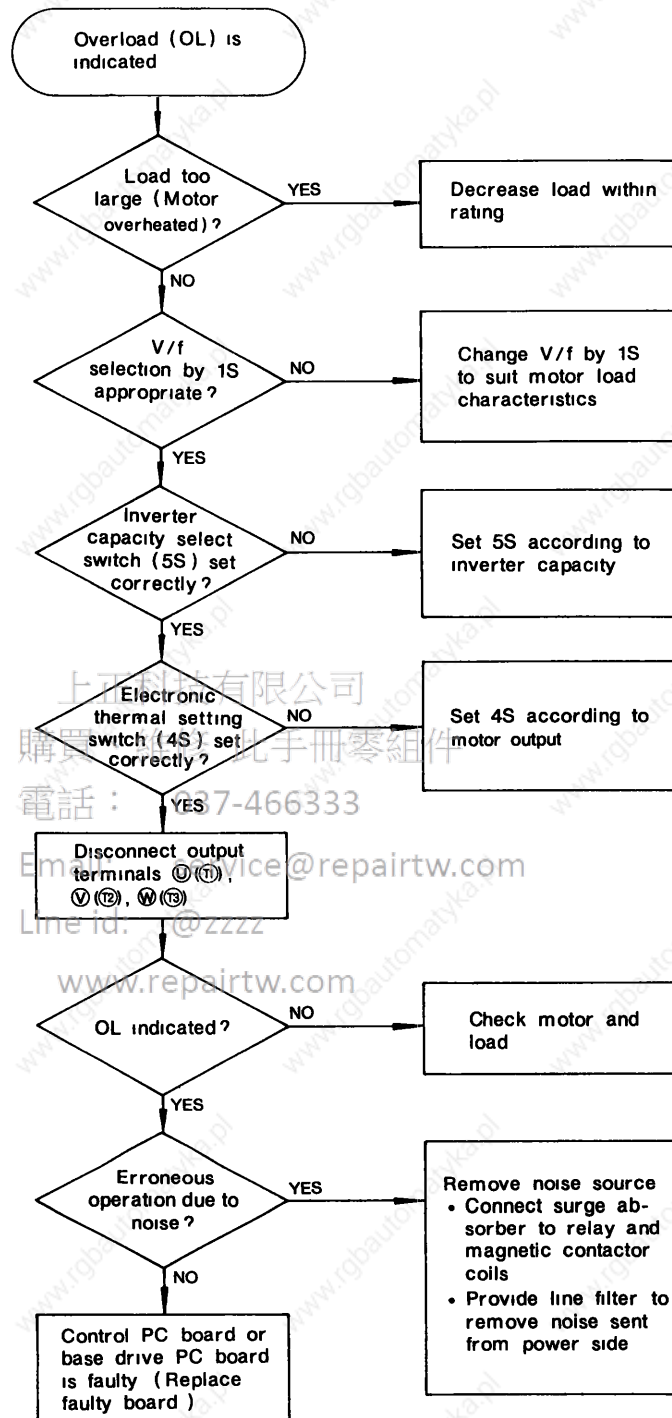


9. 3 TROUBLESHOOTING FOR FAILURE INDICATIONS (Cont'd)

(5) Undervoltage (UV) indication

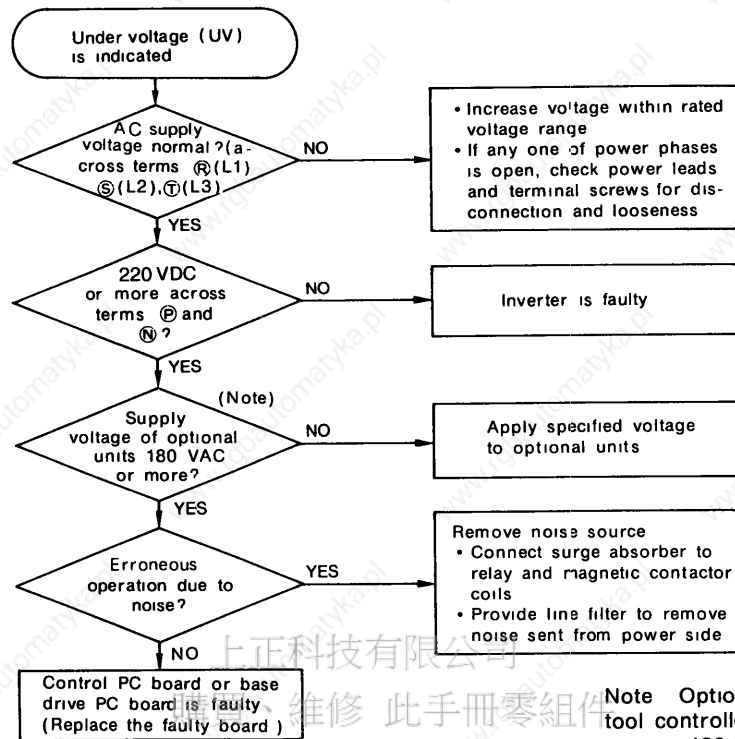


Note Optional units such as machine tool controller and precision controller require 180 to 253 VAC as supply voltage

(6) Inverter overheat (OH) indication

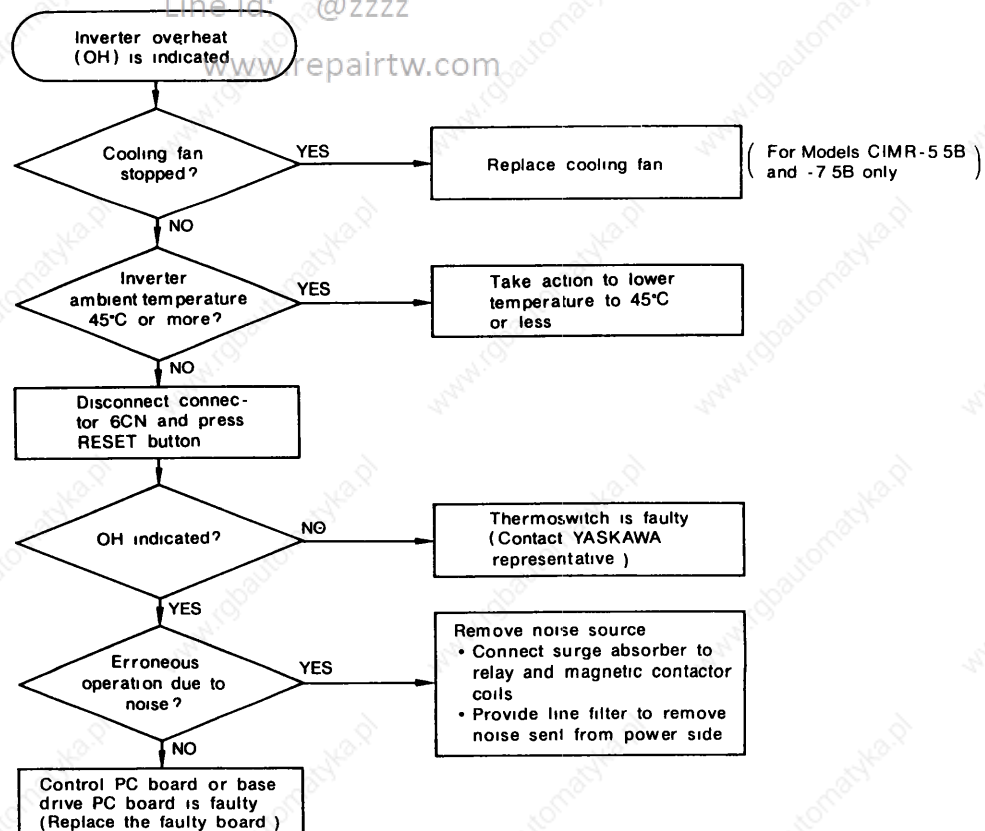


(7) Major control function error (CPF) indication

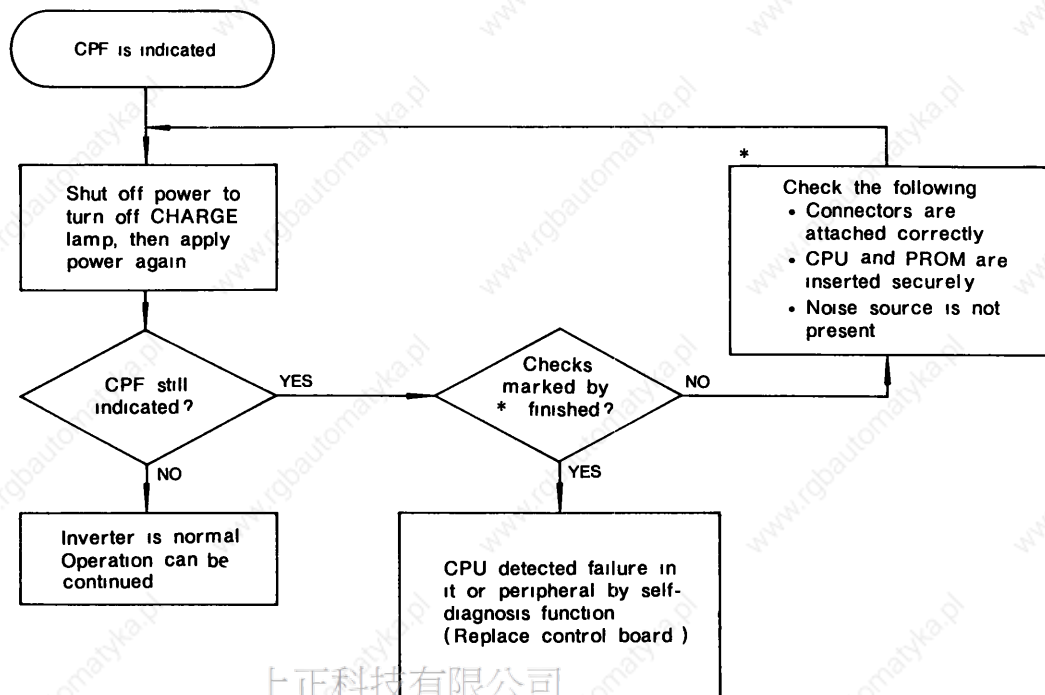

上正科技有限公司
購買、維修 此手冊零組件
電話： 037-466333

(8) External failure (EB) indication



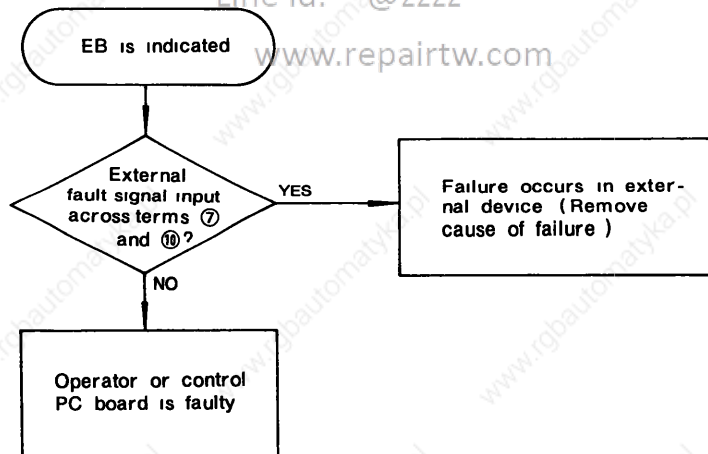


APPENDIX 1 VS-616H II RATINGS AND SPECIFICATIONS

Table 17 VS-616H II Ratings and Specifications

Inverter Model CIMR- []		0 4B	0 75B	2 2B	3 7B	5 5B	7 5B
Output Characteristics	Max Applicable Motor Output (1) kW (Hp) for 4-pole	0 5 (0 5)	0 75 (1)	2 2 (3)	3 7 (5)	5 5 (7 5)	7 5 (10)
	Inverter Capacity (2) kVA	1 (1 3)	1 5 (2 0)	3 (3 9)	15 (6 6)	7 5 (10)	10 (13 1)
	Rated Output Current (3) A	3 (3 3)	4 5 (5 0)	9 (9 9)	15 (16 5)	23 (25 3)	30 (33)
	Rated Output Voltage	3-Phase, 200/208/220/230 VAC					
	Rated Output Frequency	50, 60, 72, 90, 120, 180 Hz (240, 360 Hz available as an option)					
Power Supply	Rated Input Voltage and Frequency	3-Phase, 200/208/220/230 V, 50/60 Hz				3-Phase, 200/208/220 V, 50Hz 200/208/220/230 V, 60 Hz	
	Allowable Voltage Fluctuation	Within $\pm 10\%$					
	Allowable Frequency Fluctuation	Within $\pm 5\%$					
Control Characteristics	Control Method	Sine wave PWM					
	Frequency Control Range	40 1					
	Frequency Accuracy	Digital command 0 01% (-10 to 40°C), Analog command 0 2% (25°C $\pm 10^{\circ}\text{C}$)					
	Frequency Resolution	Analog input 0 to 10 V) 0 06 Hz/60 Hz, 0 18 Hz/180 Hz, 0 36 Hz/360 Hz Digital input 0 005 Hz/60 Hz, 0 015 Hz/180 Hz, 0 03 Hz/360 Hz					
	Overload Capacity	150% for one minute					
	Frequency Setting Signal	0 to 10 VDC, 4-20 mA (500Ω)					
	Accel/Decel Time	0 2 to 1800 sec, 6 ranges selectable, Accel/Decel time set independently					
	Efficiency	Approx 95%					
	Braking Torque	Approx 20% (100%, provided with braking module and braking resistor unit 10% duty cycle)					
	No of V/f Patterns	15 in total 4 For general purpose, 4 For high starting torque 4 For fans and pumps, 3 For machine tools					
Protective Functions	Motor Overload Protection	Electronic thermal relay (4)					
	Instantaneous Overcurrent	Base blocked at approx 200% rated current					
	Overload	Base blocked at 150% load for 1 minute					
	Overvoltage	Base blocked if converter output voltage exceeds 395V					
	Undervoltage	Base blocked if converter output voltage drops to 210 V or below					
	Momentary Power Failure	Immediately stop by momentary power failure detection (Continues system operation during power failure less than 2 sec by setting on notch ⑤ of 6S switch)					
	Fin Overheat	Thermostat					
	Stall Prevention	Stall prevention at acceleration/deceleration and constant-speed operation					
	Power Charge Indication	Charge lamp keeps ON until converter output voltage drops below 50V					
Environmental Condition	Location	Indoor (protected from corrosive gases and dust)					
	Ambient Temperature	-10 to 40°C (not frozen) (5)					
	Storage Temperature	-20 to 60°C (6)					
	Humidity	90% RH (no condensation)					
	Vibration	1 G less than 20Hz, up to 0 2 G at 20 to 50 Hz					
Approx Weight		kg (lbs)					
Dimensions mm (in)		7 (15 40)		9 (19 80)		13 (28 63)	
	Width	200 (7 87)		200 (7 87)		200 (7 87)	
	Height	300 (11 8)		300 (11 8)		350 (13 77)	
	Depth	175 (6 89)		205 (8 07)		215 (8 46)	

- (1) For standard motors rated 4 poles at 60 Hz
- (2) Parenthesized values indicate max continuous output capacity
- (3) Parenthesized values indicate max continuous output current
- (4) Protects motors having the torque characteristics shown below

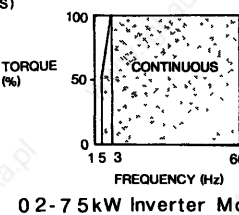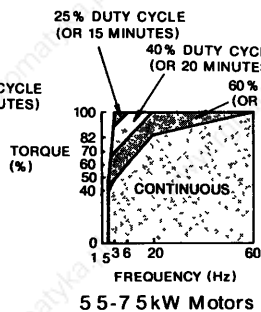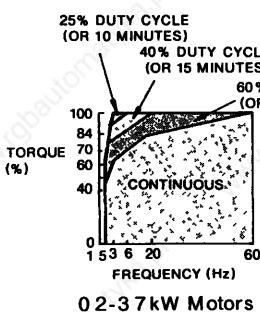

- (5) Up to 50°C when built-in a panel, with front cover removed
- (6) Temperature during shipping Storing in this temperature for a long-period may deteriorate main circuit capacitor, contact your Yaskawa representative

APPENDIX 2 TERMINAL FUNCTIONS

Table 18 Terminal Functions and Voltages of Main Circuit

Terminals	Functions	Levels	
		Model CIMR-0.4B to -3.7B	Type CIMR-5.5B and -7.5B
R (L1)	Main circuit input power supply	Three-phase 200/208/220/230 VAC at 50/ 60Hz (Voltage fluctuation $\pm 10\%$)	Three-phase 200/208/220 VAC, 50Hz; 200/208/220/230 VAC, 60 Hz (Voltage fluctuation $\pm 10\%$)
S (L2)			
T (L3)			
r (L1)	Cooling fan input power supply (For Models CIMR-5.5B and -7.5B)	—	
s (L2)			
U (T1)	VS-616HII output	Three-phase 200/208/220/230 VAC (corresponding to input voltage)	
V (T2)			
W (T3)			
B ₁ , B ₂	Braking module	0 or Approx 300 VDC (across the terminals Ⓑ - Ⓝ)	
a, b			
B ₃	Braking resistor unit		
P	Main circuit	Approx 300 VDC (across the terminals Ⓟ - Ⓝ)	
N	DC power supply		
E	Ground terminal	—	

Table 19 Terminal Functions and Signals of Control Circuit

Terminals	Functions	Levels
1	Sequence control input common terminal	Sequence control input 0V
2	Run signal	Run at closed*
3	Stop signal	Stop at open†
4	Connection to shield sheath of signal lead	—
5	Forward / Reverse operation selector.	Forward at open†, Reverse at closed*
6	Master / Aux frequency reference selector	Master speed at open†, Aux at closed
7	External fault input	Fault at closed†
8	Fault reset input (external)	Fault reset at closed*
9	Master speed frequency reference input	0 to +10 V or 4–20mA(500 Ω)
10		0 V
11	Connection to shield sheath of signal lead	—
12	Run contact output‡ (1NC)	Contact capacity: 250 VAC at 1A or below 30 VDC at 1A or below
13		
14	Fault contact output (1NONC)	Common
15		Closed* at fault
16		Open† at fault
17	Frequency meter input	Approx +10V/100%, output impedance 3k Ω
18		0
19	Connection to shield sheath of signal lead	—
20	Aux frequency input	+15V (VS-616HII internal power supply)
21		+10V/100%
22		0 V

*Short-circuited with terminal ①

†Opening terminal

‡Used as a zero-interlock contact With notches ① and ② of operation mode selector switch 6S set OFF, RUN contact is on at RUN command and off after DB operation at STOP command

VS-616HII used in the internal circuit and interconnection diagrams is of Model CIMR-7.5B, 200-230 V, 10 kVA.

POWER SUPPLY,
3-PHASE
200/208/220 VAC,
50 Hz
200/208/220/230
VAC, 60 Hz

Fig 22 VS-616 HII Internal Circuit

A3-2 INTERCONNECTION DIAGRAMS FOR VS-616 H II APPLICATIONS

(1) WITH ANALOG OPERATOR

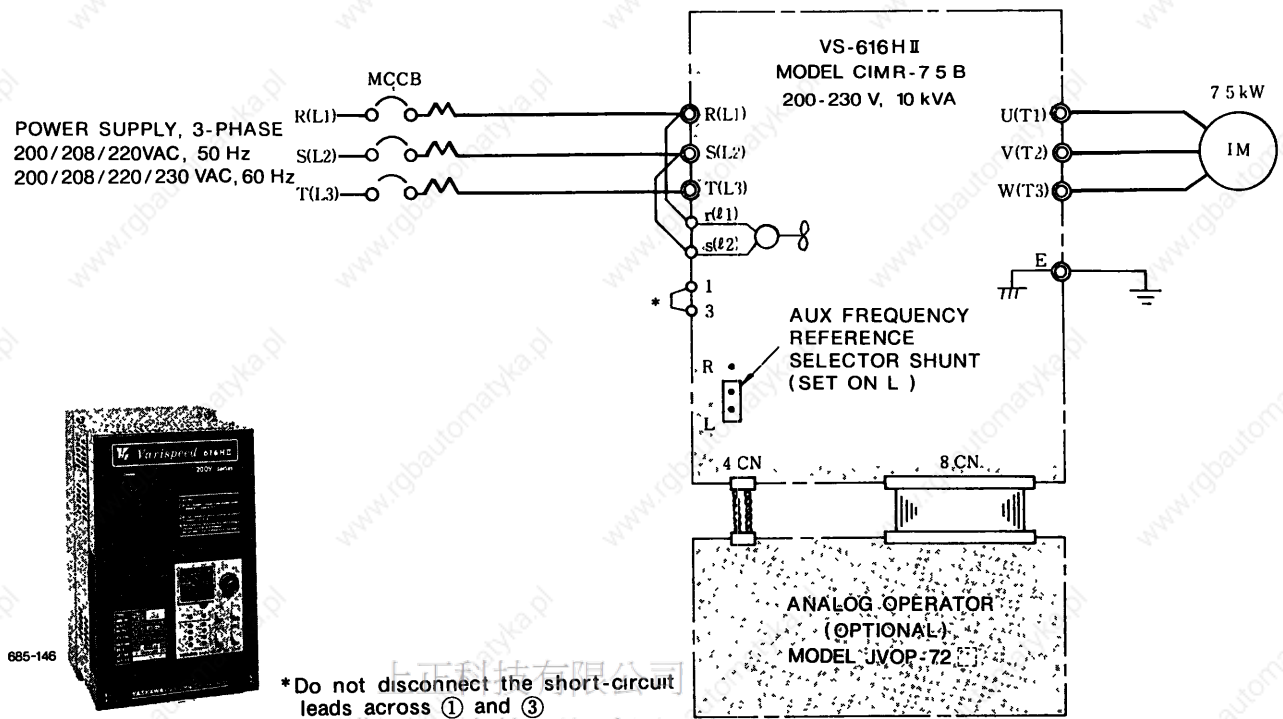


Fig 23 With Analog Operator

(2) WITH DIGITAL OPERATOR


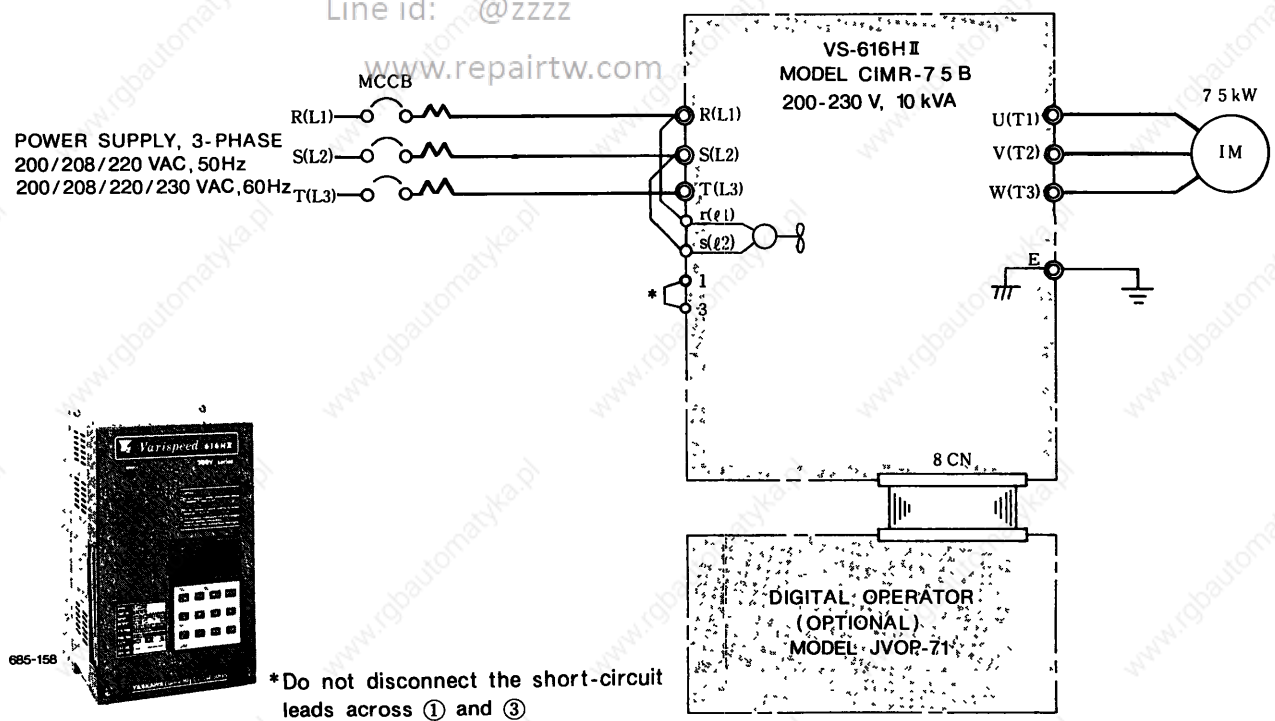


Fig 24 With Digital Operator

A3-2 INTERCONNECTION DIAGRAMS FOR VS-616HII APPLICATIONS (Cont'd)

(3) WITH VS OPERATOR

POWER SUPPLY, 3-PHASE
200/208/220 VAC, 50 Hz
200/208/220/230 VAC, 60 Hz

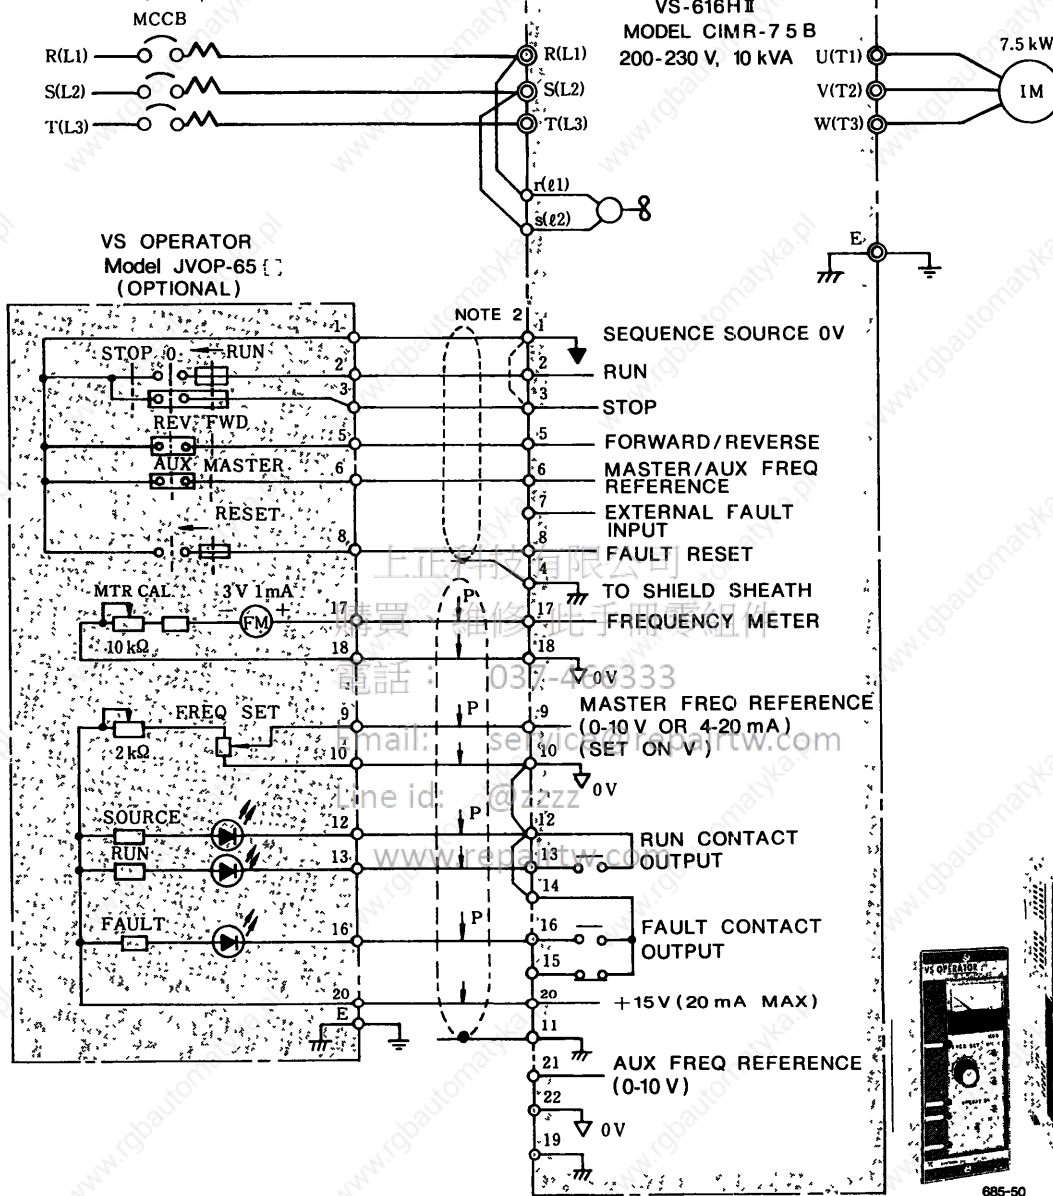


Note

- 1 To give frequency reference from VS operator, set the VS operator MASTER/AUX switch to MASTER
- 2 Remove the short-circuit leads across ① and ③.

Fig 25 With VS Operator

(4) WITH USER-ARRANGED OPERATION CIRCUIT

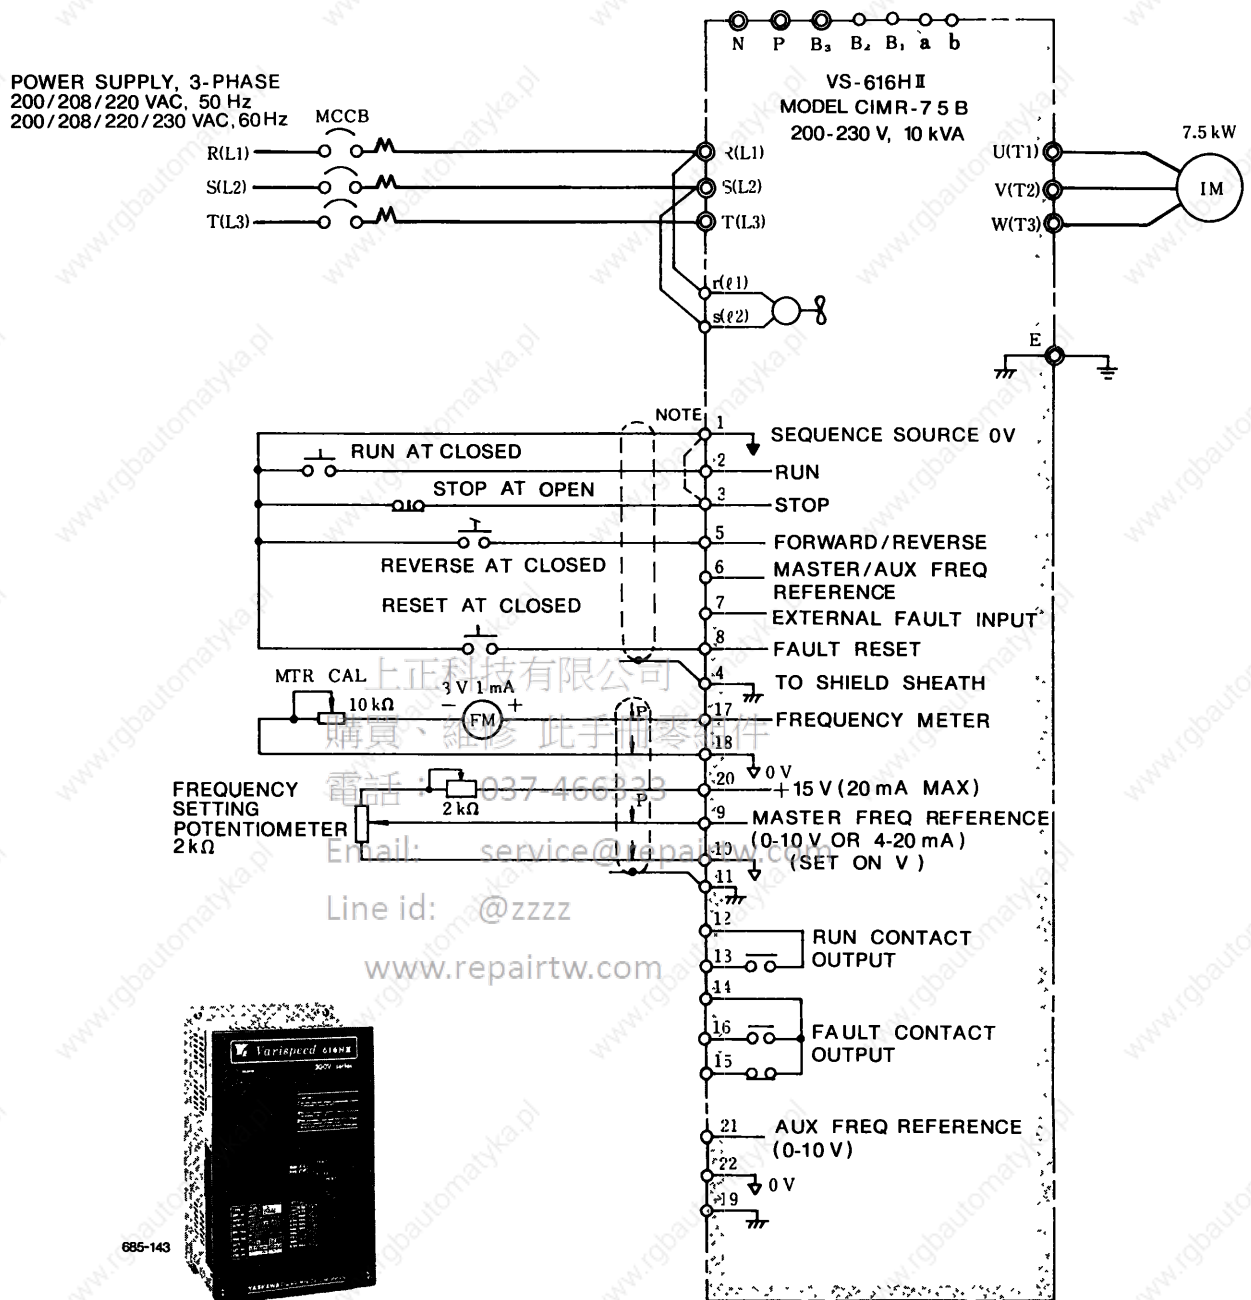

Note Remove the short-circuit lead
 across external terminals ① and ③

Fig 26 With User-Arranged Operation Circuit

A3-2 INTERCONNECTION DIAGRAMS FOR VS-616H II APPLICATIONS (Cont'd)

(5) WITH MAGNETIC CONTACTOR FOR START/STOP OPERATION

(a) Magnetic contactor opened at inverter fault

Before turning on AC main circuit power, be sure the motor is at rest.
For frequent start/stop operations, this drive circuit is not recommended.


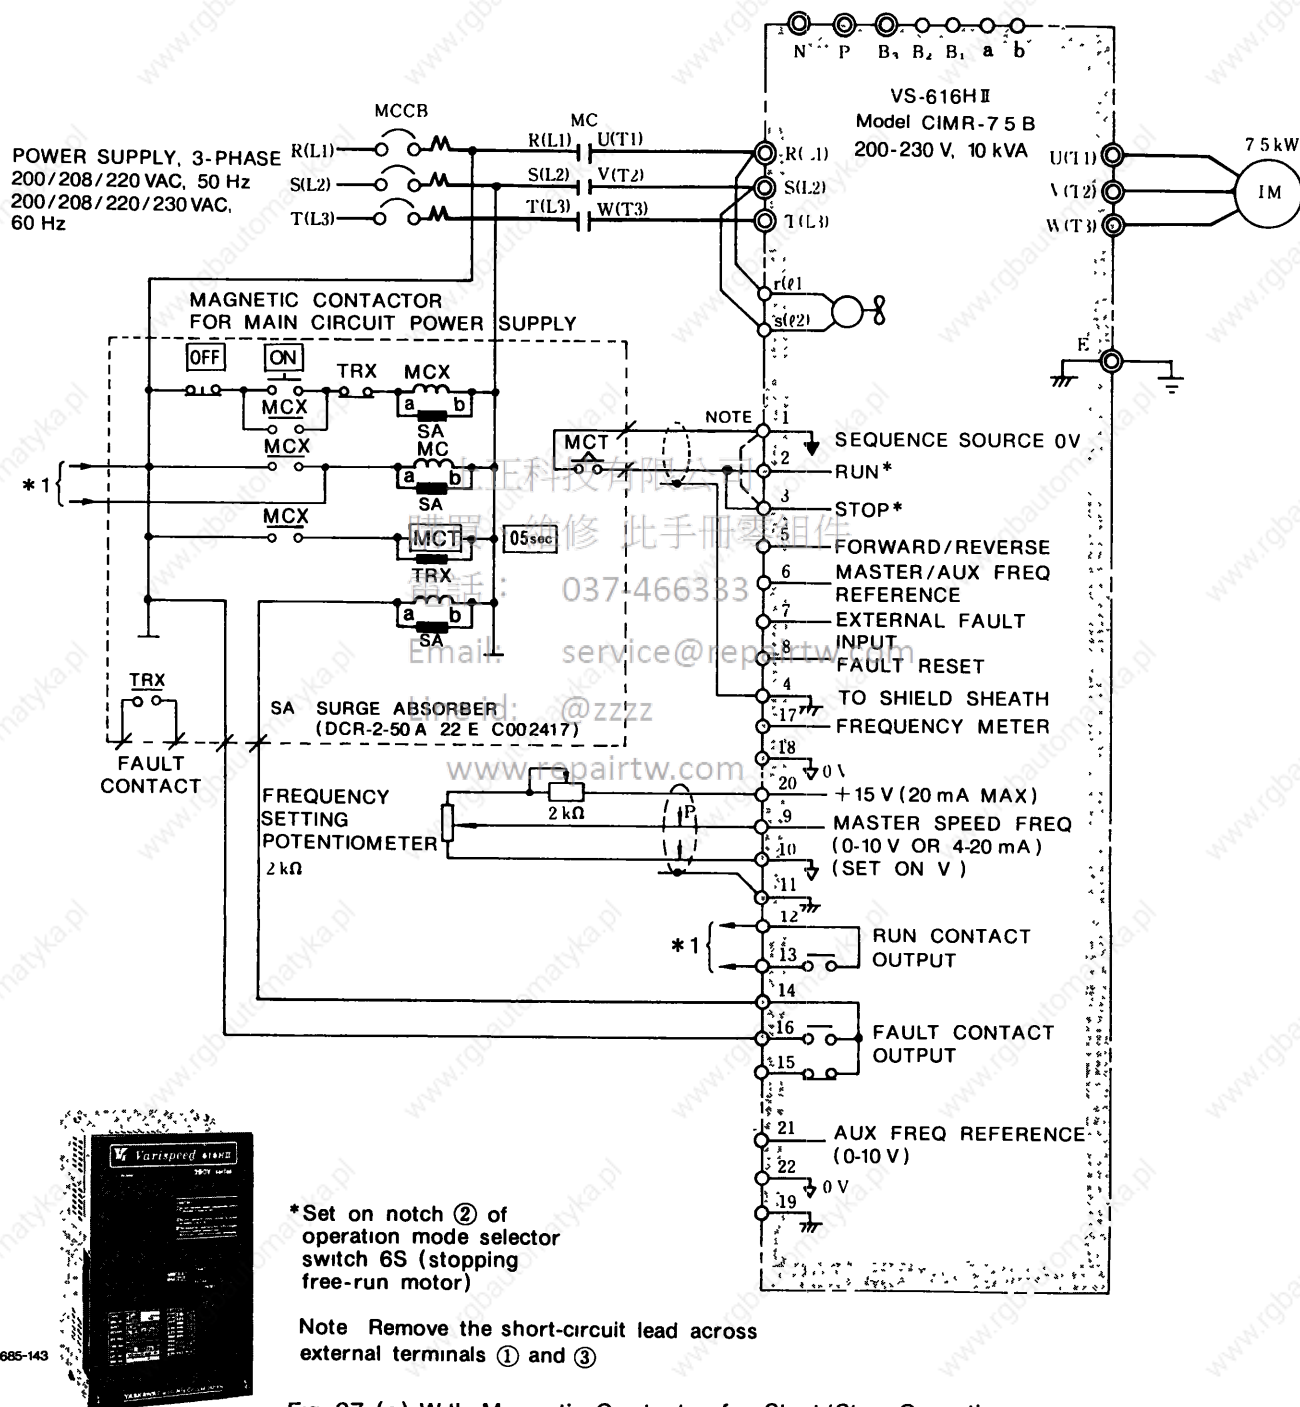


Fig 27 (a) With Magnetic Contactor for Start/Stop Operation

(b) Magnetic contactor not opened at inverter fault

Before turning on AC main circuit power, be sure the motor is at rest.
For frequent start/stop operations, this drive circuit is not recommended.

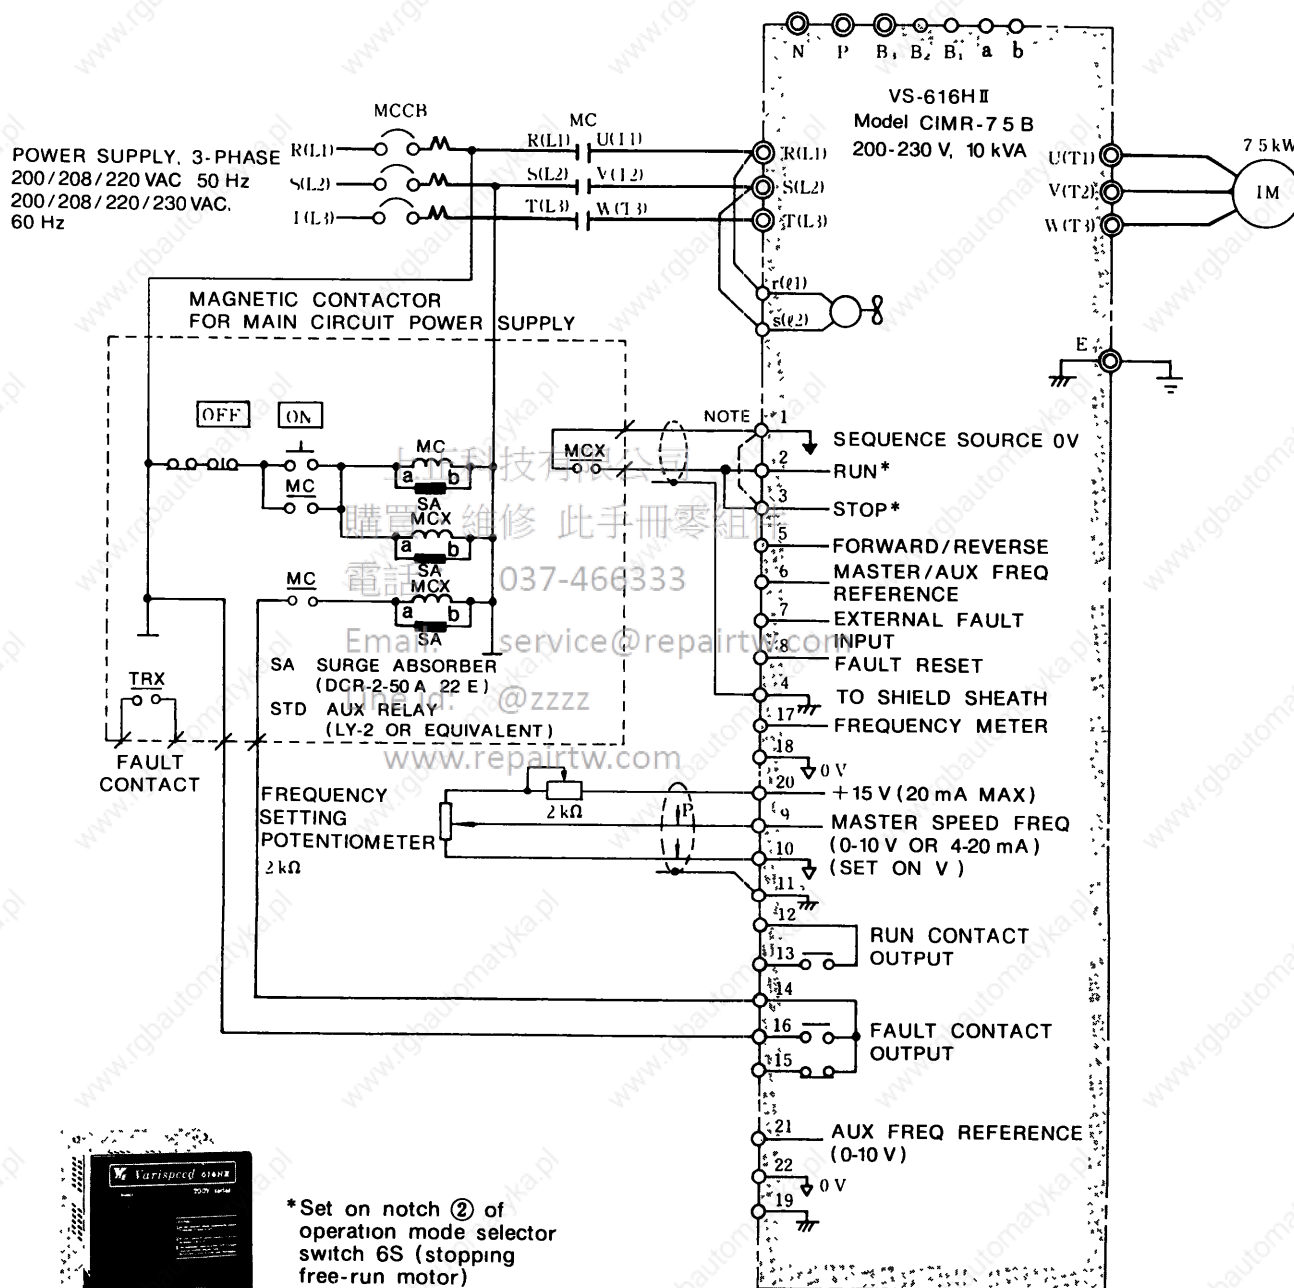

685-143

*Set on notch ② of operation mode selector switch 6S (stopping free-run motor)

Note Remove the short-circuit lead across external terminals ① and ③

Fig. 27 (b) With Magnetic Contactor for Start/Stop Operation

(6) WITH VS OPERATOR AND ANALOG OPERATOR

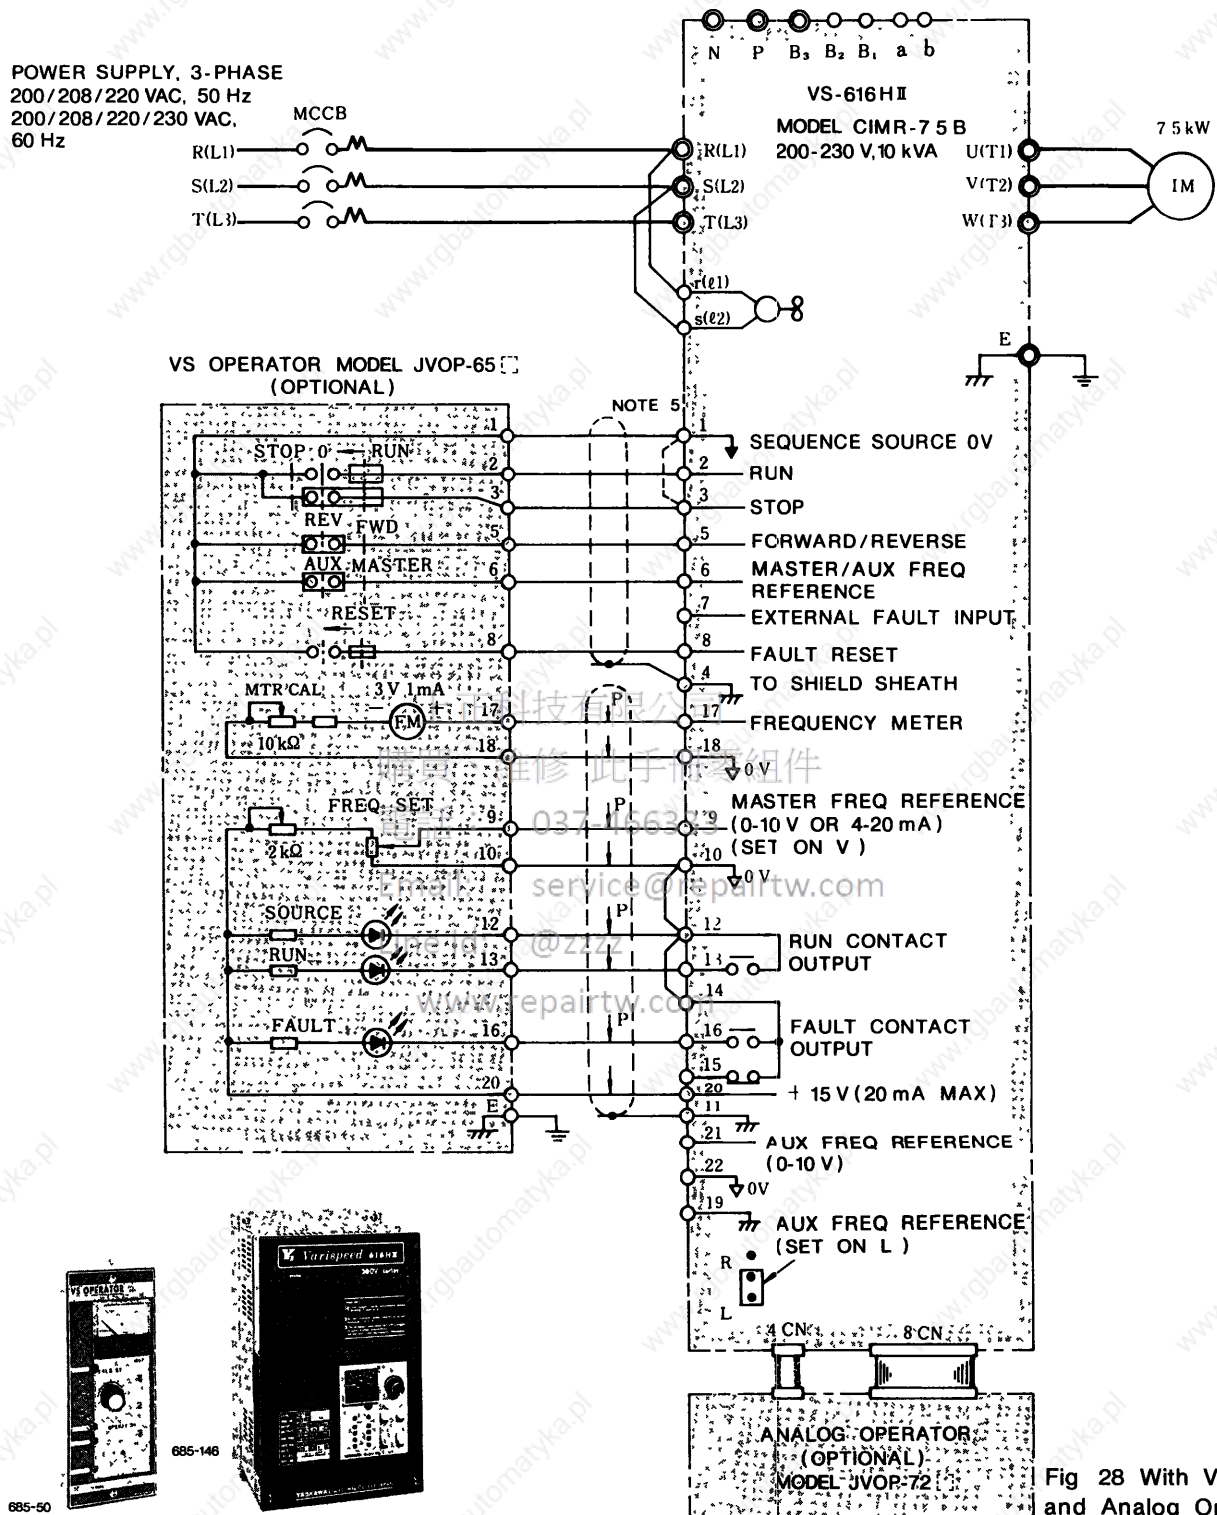



Fig 28 With VS Operator and Analog Operator

Note

- 1 To give the frequency reference from VS operator, change the Analog operator AUTO/MAN switch to AUTO, and VS operator MASTER/AUX switch to MASTER
- 2 To give the frequency reference from Analog operator, set the AUTO/MAN switch to MAN
- 3 Use of Analog operator does not permit the use of auxiliary frequency reference terminal ②
- 4 Stop operation can be made by either VS operator or Analog operator Stop command. Either stop command takes priority over any command
- 5 Disconnect the short-circuited terminals ① and ③

A3-2 INTERCONNECTION DIAGRAMS FOR VS-616 HII APPLICATIONS (Cont'd)

(7) WITH VS OPERATOR AND DIGITAL OPERATOR

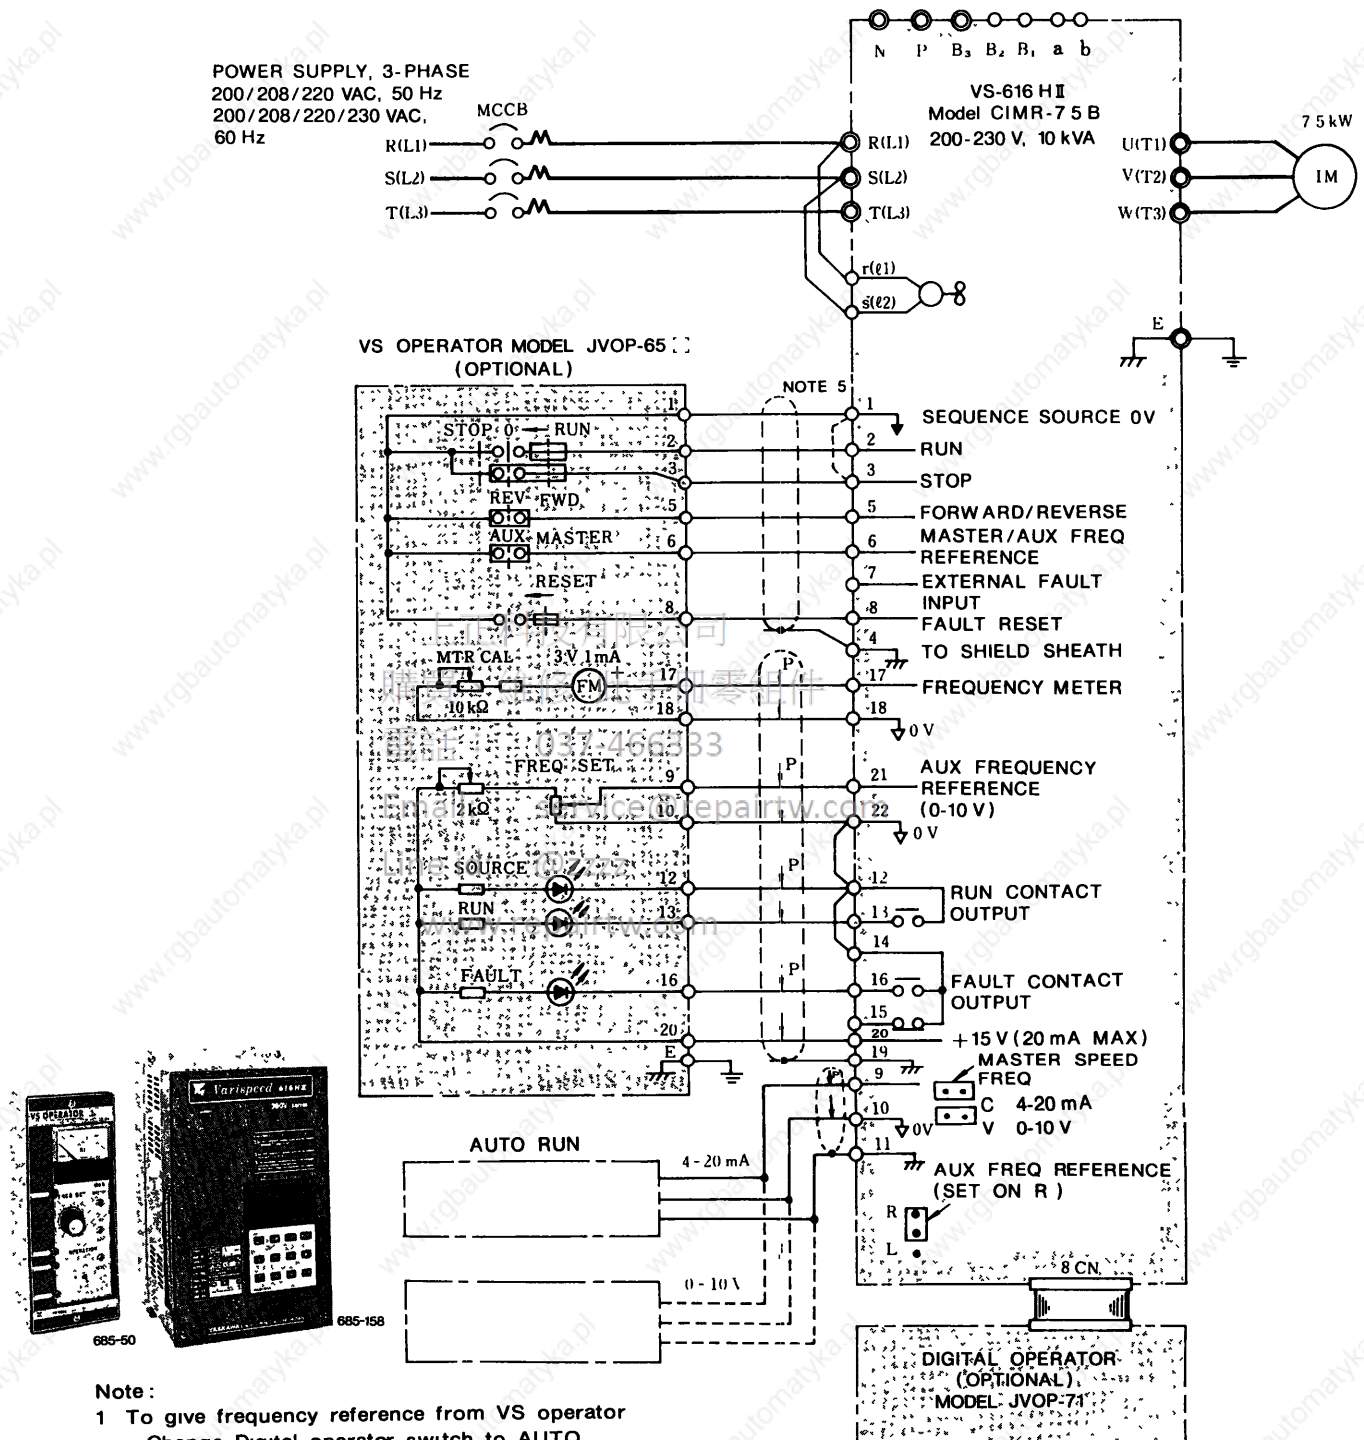

Note:

- To give frequency reference from VS operator
 - Change Digital operator switch to AUTO
 - Change VS operator MASTER/AUX switch to AUTO
- To give frequency reference through automatic operation command,
 - Change the Digital operator switch to AUTO
 - Change the VS operator MASTER/AUX switch to MASTER
 - For voltage reference of 0 to 10 V, set the MASTER SPEED FREQUENCY shunt on (V) and for current reference of 4 to 20 mA, set it on (C)
- To set frequency reference from Digital operator, set the Digital operator switch to MAN Switching frequency reference from Digital operator to the other devices can be made at motor standstill only
- Stop operation can be made by either VS operator or Digital operator
Either stop command takes priority over any command
- Disconnect the short-circuited terminals ① and ③

Fig 29 With VS Operator and Digital Operator

(8) WITH BRAKING MODULES AND BRAKING RESISTOR UNIT

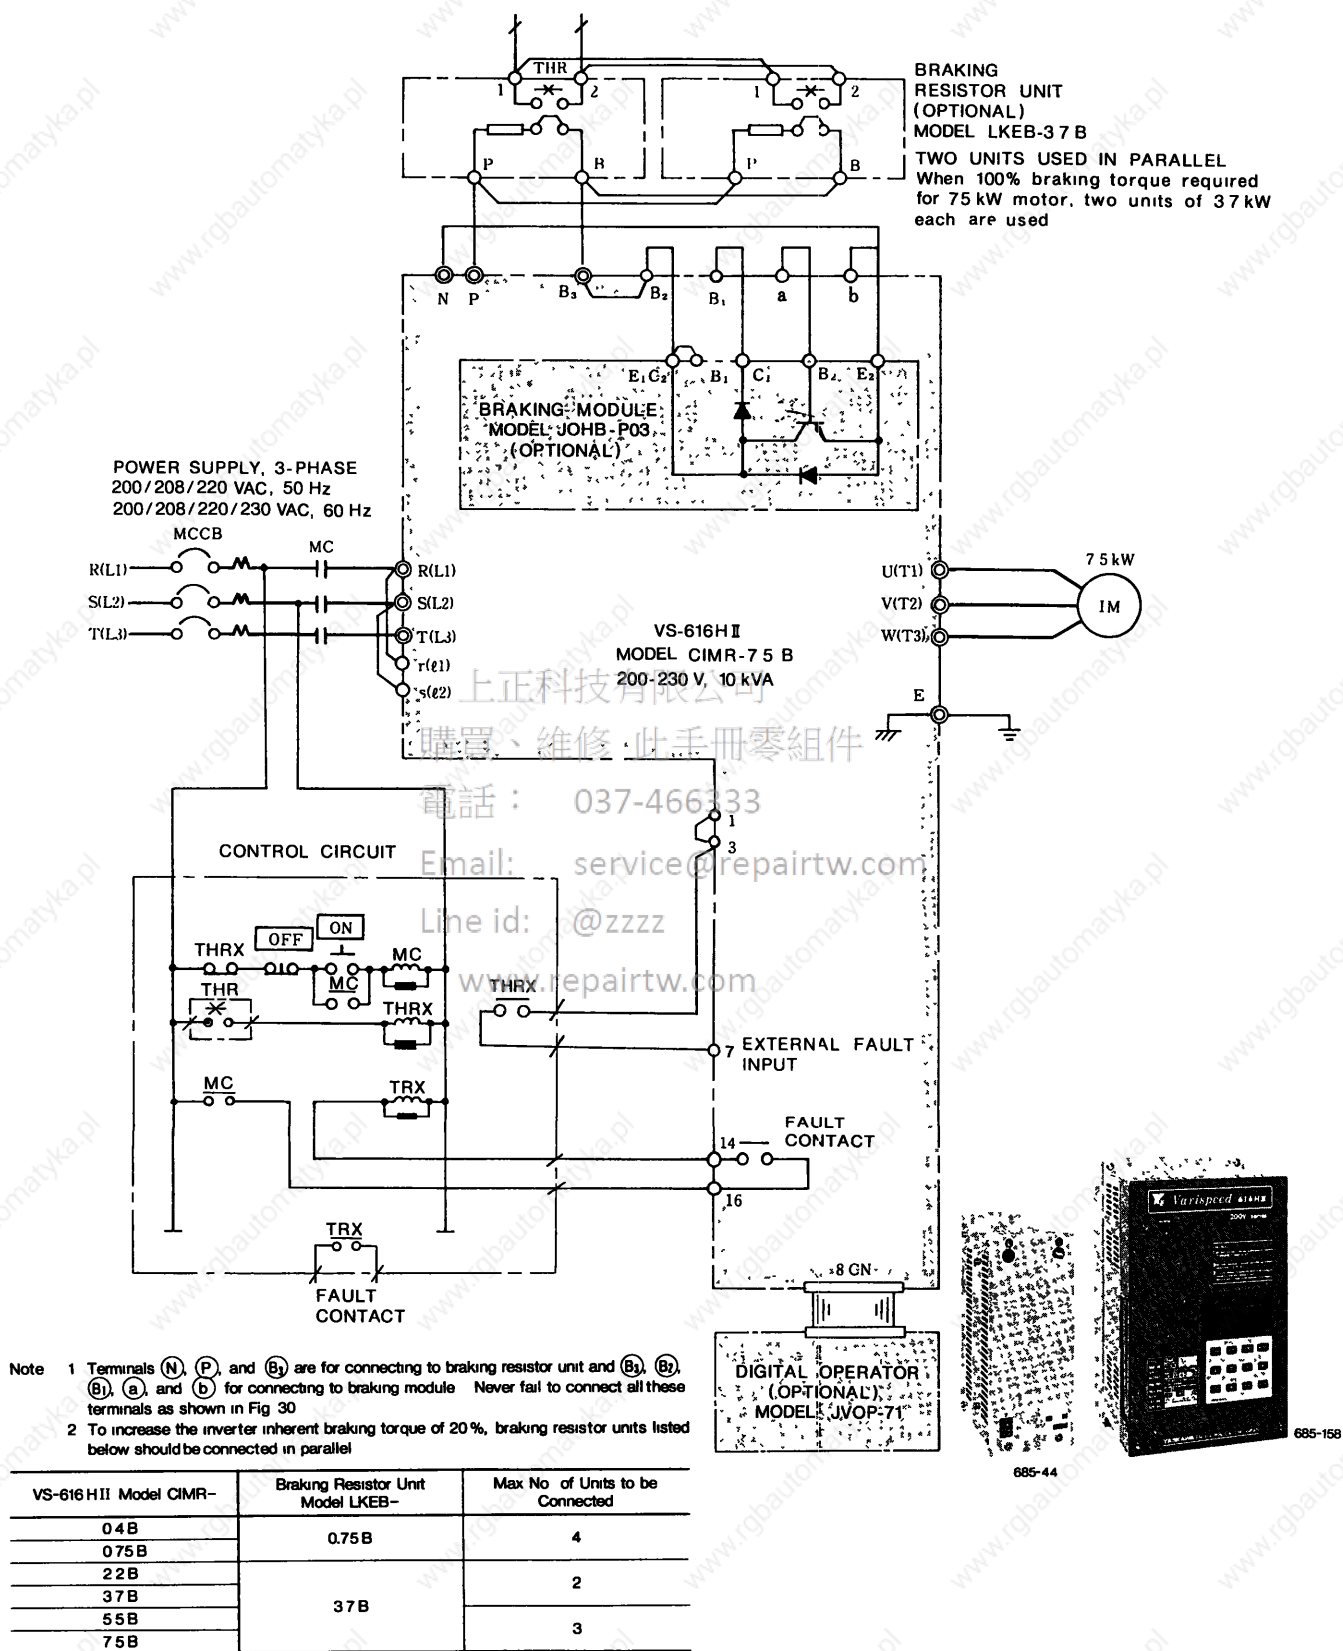


Fig 30 With Braking Module and Braking Resistor Unit

A3-2 INTERCONNECTION DIAGRAMS FOR VS-616H II APPLICATIONS (Cont'd)

(9) WITH TRANSISTOR (OPEN-COLLECTOR) FOR START/STOP OPERATION

To input start/stop signals by relay contacts or transistor (open collector), use the following elements:

- Relay contact:
Contact capacity — 30 VDC or above
Rated current — 100 mA or above
- Transistor (open collector):
Withstand voltage — 35 VDC or above
Rated current — 100 mA or above

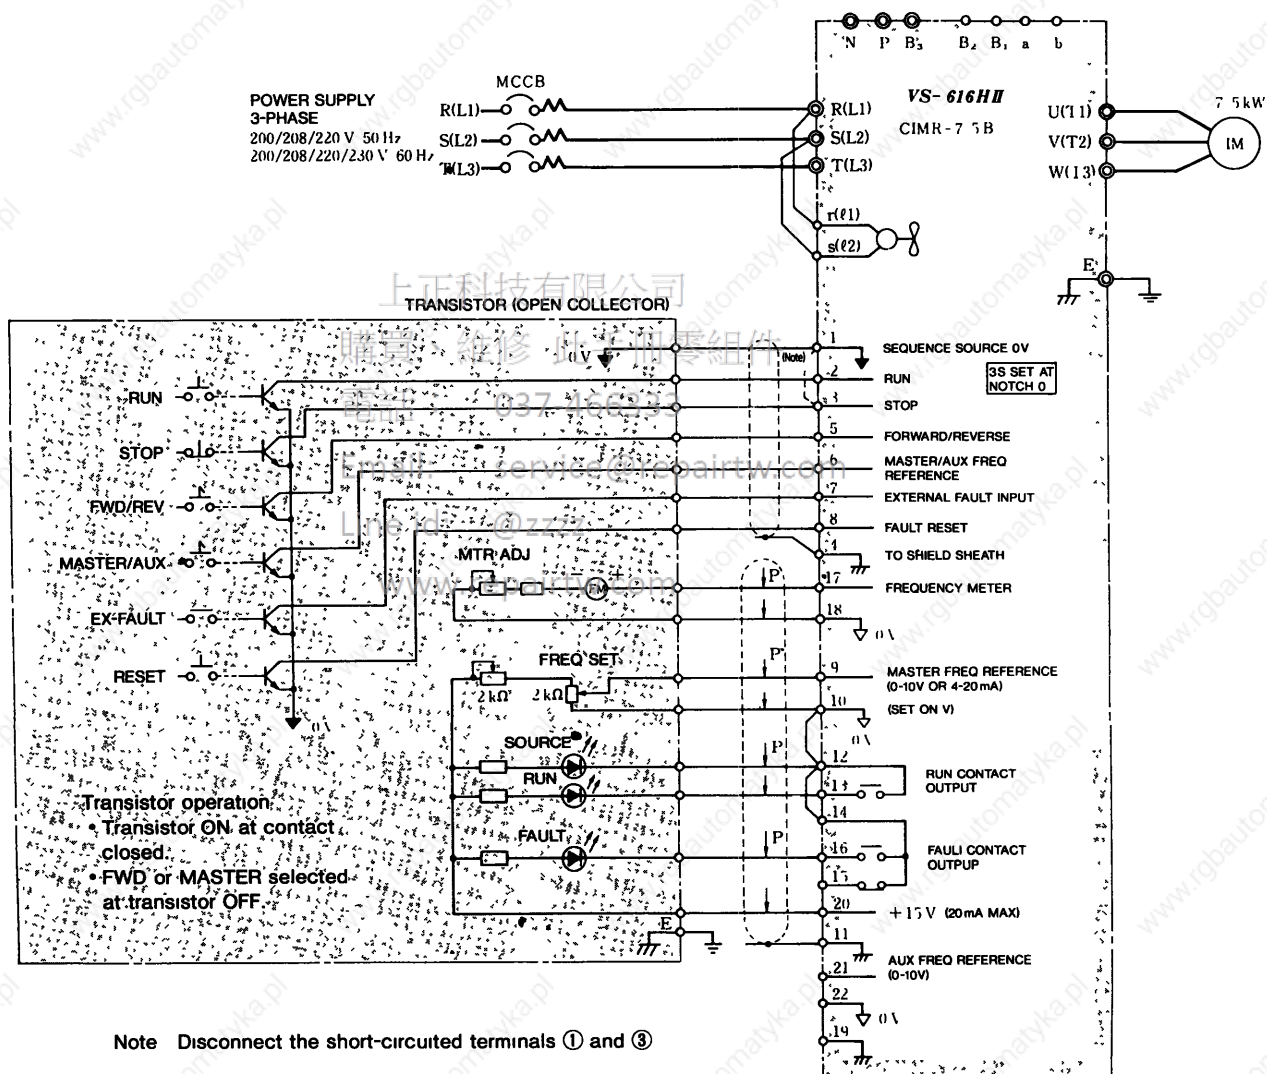


Fig. 31 With Transistor (Open-Collector) for Start/Stop Operation

A4-1 VS-616 H II OPTIONAL UNITS

Name	Model	Code No	Functions
Digital Operator	JVOP-71	73041-0701X	Mounted on the inverter. Issues operation commands, sets the frequency by the digital signal, and displays the preset or current frequency in digital form. Also, displays the type of fault in characters when a failure occurs
Analog Operator	JVOP-72-□□*	73041-0702X-□□□□*	Mounted on the inverter Gives operation commands, sets the frequency by the analog signal, and indicates the current frequency on the frequency meter
VS Operator	JVOP-65-□□*	73041-0703X-□□□□*	Used for remote operation Outputs operation commands, sets the frequency by analog commands, and indicates the current frequency on the frequency meter.
Braking Module	JOHB-P0 1	73616-0001X	Mounted on the inverter If the main circuit DC voltage exceeds a specified level during motor regeneration, causes the braking resistor to absorb regeneration energy
	JOHB-P0 2	73616-0002X	
	JOHB-P0 3	73616-0003X	
Braking Resistor Unit	LKEB-0.75B	73616-0020X	Absorbs regeneration energy of the motor, enhancing the inverter braking capability
	LKEB-3 7B	73616-0021X	

購買、維修 此手冊零組件

Email: service@repairtw.com

Frequency Meter Max Scale	60/120 Hz	1	01
	72 Hz	4	04
	90/180 Hz	5	05
	240 Hz	8	08
	360 Hz	9	09

Frequency Meter Max Scale	75 Hz	1	01
	150 Hz	2	02
	220 Hz	3	03

A4-2 VS-616HII AUXILIARY UNITS

Table 21 VS-616HII Auxiliary Units

Name	Function
Main Circuit Magnetic Contactor	Switches on and off the main circuit, and interlocks the circuit if a failure occurs
Molded-case Circuit Breaker (MCCB)	Protects the main circuit wiring and inverter from damage caused by short-circuit current
AC Reactor	Improves the high-frequency content of the power or prevents mutual interference due to voltage waveform distortion when connected to the power side. Better the current waveform, lowers noise, and increases the motor torque when connected to the output of the inverter
Noise Filter	<ul style="list-style-type: none"> Suppresses transmission of high-frequency noise produced by the inverter to the power side (input noise filter) Suppresses transmission of high-frequency noise produced by the inverter to the motor (output noise filter)
Thermal Overload Relay	Protects the motors from burning when two or more motors are operated by one inverter
Ground Fault Interrupter	Detects degradation in main circuit insulation, and shuts off the main circuit. (Set the Setting to 200mA, and the operating time to 0.2sec or more.)
Surge Absorber	Prevents problems due to noise when connected coils of the sequence relay, magnetic switch, magnetic valve, and so on (DCR2-50A22E or DCR2-10A25C). (If power waveform distortion is serious, contact YASKAWA representative.)
Frequency Setting Potentiometer	Variable resistor used to set the analog frequency (2k Ω , 0.5W or more).
Frequency Meter Calibration Potentiometer	Calibrates the maximum indication value of the frequency meter. (10k Ω , 0.25W or more)
Frequency Meter	Indicates the output frequency of the inverter. (3V, 1mA at full scale)

Line id: @zzzz

Table 22 Devices of VS Operator Model JVOP-65-[]

Device	Model	Specifications	Part Code
Frequency Meter	DCF-6A	75 Hz at full scale	FM 000067
		150 Hz at full scale	FM 000069
		220 Hz at full scale	FM 000072
Frequency Setting Potentiometer	RV30YN 20S-HV	2k Ω , 1W	RH 000649

APPENDIX 5 CHECKING OF DIODE AND TRANSISTOR MODULES

A5-1 DIODE MODULE

Measure the resistance across the module terminals with a volt-ohm meter. Use the meter by setting at $\times 1\Omega$ range. The measured resistance should be within the reference value listed in Table 23.

Table 23 Diode Module Resistances

Diode Module Terminals	Volt-ohm Meter Terminals		Reference Resistances	Abnormal Resistances
	\ominus	\oplus		
Model CIMR-04B, -075B, -55B, -75B,		\ominus	\ominus	∞
		\oplus	\ominus	
		\ominus	\oplus	Approx several 10 ohms
		\oplus	\oplus	
Model CIMR-22B, -37B		\ominus	\ominus	∞
		\oplus	\ominus	
		\ominus	\oplus	Approx several 10 ohms
		\oplus	\oplus	



685-58

A5-2 TRANSISTOR MODULE

Measure the resistance across the module terminals with a volt-ohm meter. Use the meter by setting at $\times 1\Omega$ range. The measured resistance should be within the reference value listed in Table 24.

Table 24 Transistor Module Resistances of Model CIMR-04B

Email: service@repairtw.com

URL: www.repairtw.com

License: CC BY-NC-SA

Copyright: 2012-2013

Version: 1.0

Page: 1 of 1

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10

Printed: 2013-08-10


Printed: 2013-08-10




685-59


A5-2 TRANSISTOR MODULE (Cont'd)

Table 25 Transistor Module Resistances of Model CIMR-075B, -22B and -37B

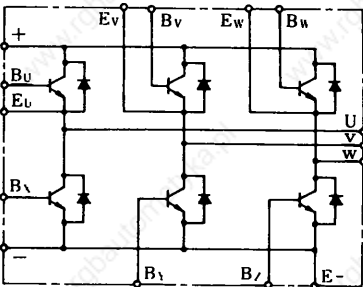Transistor Module Terminals		Reference Resistances	Abnormal Resistances	Transistor Module Terminals
VOM Terminal ⊖	VOM Terminal ⊕			
U (T1)	+	Approx several 10 ohms	0 Ω or ∞	
V (T2)	+			
W (T3)	+			
—	U (T1)			
—	V (T2)			
—	W (T3)			
+	U (T1)	Approx several 100 kilohms	0 Ω	
+	V (T2)			
+	W (T3)			
U (T1)	—			
V (T2)	—			
W (T3)	—			
Bu	Eu	Approx several 10 ohms	Approximate 10 kΩ or above	
Bv	Ev			
Bw	Ew			
Bx	E-			
By	E-			
Bz	E-			
Eu	Bu	Approx several 100 ohms to several kilohms	0 Ω or ∞	
Ev	Bv			
Ew	Bw			
E-	Bx			
E-	By			
E-	Bz			

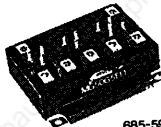


685-59

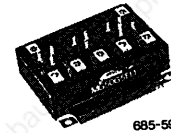

685-59

Email: service@repairtw.com

Table 26 Transistor Module Resistances of Type CIMR-5.5B and -7.5B

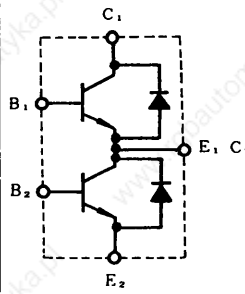Transistor Module Terminals		Reference Resistances	Abnormal Resistances	Transistor Module Terminals
VOM Terminal \ominus	VOM Terminal \oplus			
E1 C2	C1	Approx several 10 ohms	$0\ \Omega$ or ∞	
C1	E1 C2	Approx several 100 kilohms	$0\ \Omega$	
B1	E1 C2	Approx several 10 ohms	Approx several 10 kilohms or above	
E1 C2	B1	Approx several 100 ohms to several kilohms	$0\ \Omega$ or ∞	
E2	E1 C2	Approx several 10 ohms	$0\ \Omega$ or ∞	
E1 C2	E2	Approx several 100 kilohms	$0\ \Omega$	
B2	E2	Approx several 10 ohms	Approx several 10 kilohms or above	
E2	B2	Approx several 100 ohms to several kilohms	$0\ \Omega$ or ∞	



685-59

APPENDIX 6 PARTS REPLACEMENT

For checking or replacing parts, observe the following.

- Tag leads to insure correct reconnection before disconnecting the leads without marks.
- Tighten the parts mounting screws or lead terminal screws firmly. Even one loose screw may cause malfunction.

A6-1 REPLACEMENT OF CONTROL PC BOARD

1. Remove the connectors 1CN, 5CN, 6CN, and 7CN by the lead lock. To remove the lead lock, press the top of the locking clip to release from the header and pull out.
2. Remove the connector 3CN. Open the lock lever, and the connector is released.

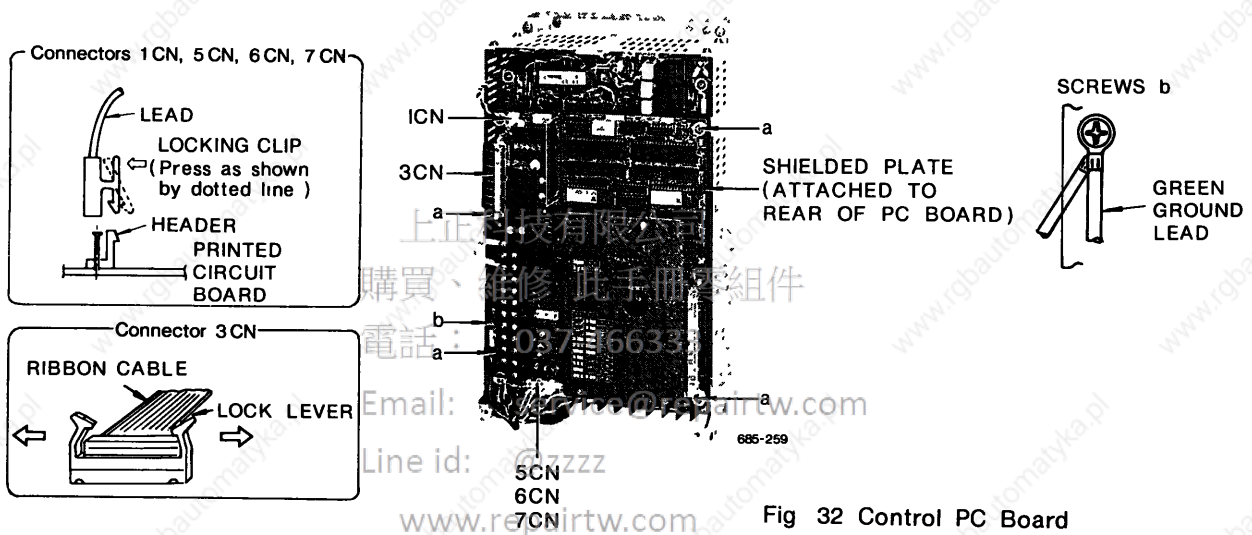


Fig 32 Control PC Board

3. Remove 4 screws (a) and a ground lead screw (b) to remove the control PC board.
4. Take off the control printed PC board and shield plate which is attached to the rear of the board.

A6-2 REPLACEMENT OF BASE DRIVE PC BOARD

1. Pull out the connectors 3CN to 8CN and 10CN.
2. Remove three mounting screws (a) and ground lead screw (b).
3. Remove the base drive PC board with shield plate.

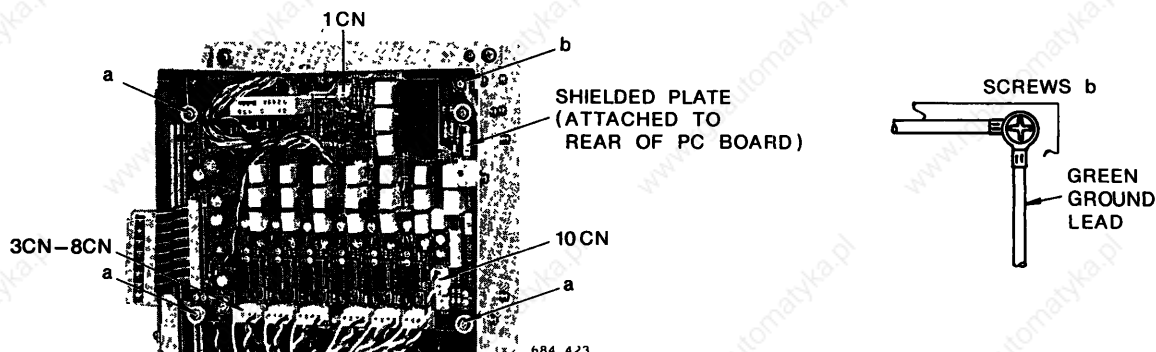


Fig 33 Base Drive PC Board

A6-3 REPLACEMENT OF DIODE MODULE AND TRANSISTOR MODULE

CAUTION

When remounting transistor or diode modules, apply thermal compound "JOINTAL Z" (Nippon Light Metal Co., Ltd.), or equivalent compound to the mounting surface, to assure good contact and heat conduction between the module and the mounting surface for cooling.

MODULE REMOVAL

1. Remove the bus bar mounting screws (c).
2. Remove module lead terminal screws (a).
3. Remove module mounting screws (b) and (d).
4. Remove the modules.

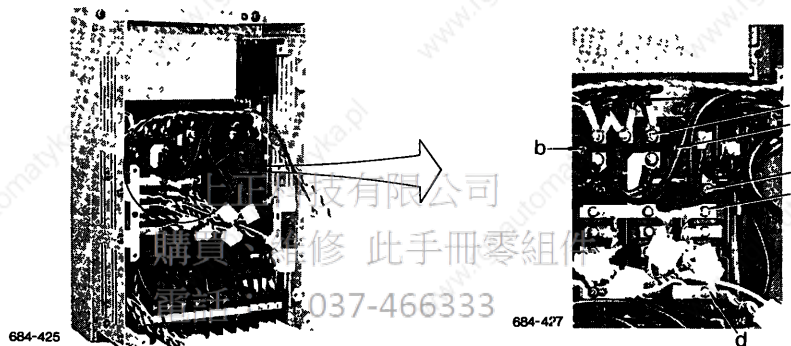


Fig 34 Removing Diode Module and Transistor Module

A6-4 REPLACEMENT OF COOLING FAN

VS-616H Models CIMR-5.5B, and -7.5B incorporate cooling fans. Replace the fan after approximately 20,000 hours of cumulative operation.

1. After removing the control PC and base drive PC boards as outlined in par. A6-1 and A6-2, remove fan casing mounting screws (a).
2. Remove screws (b) and take the fan support with fan out of the fan casing.
3. Remove screws (c) and separate fan from fan support.

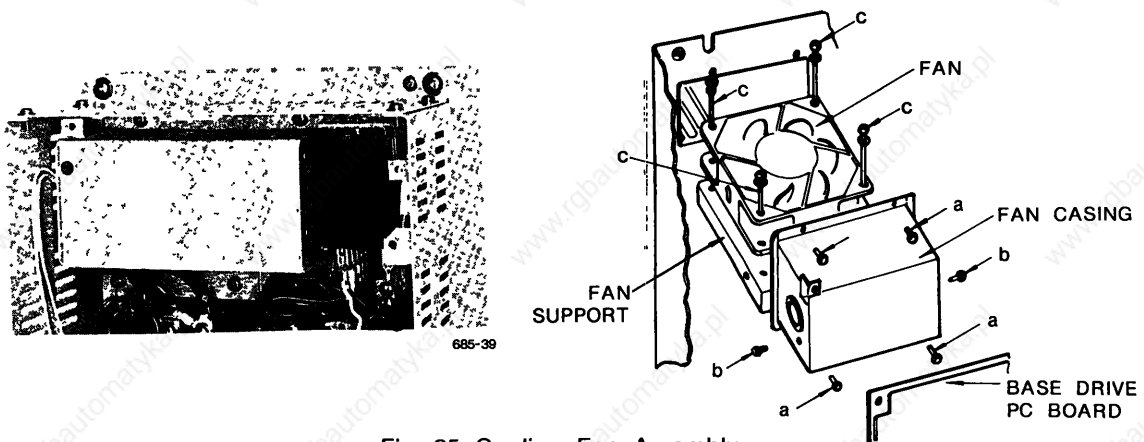


Fig 35 Cooling Fan Assembly

APPENDIX 7 RENEWAL PARTS

As insurance against costly downtime, it is strongly recommended that renewal parts to be kept on hand in accordance with the table below. When ordering renewal parts, please specify to Yaskawa Electric office or representative with; Parts Name, Parts Code No. and Quantity.

Table 27 Renewal Parts

Parts Name			Main Circuit Transistor	Main Circuit Diode	Base Drive PC Board*	Control PC Board†‡	Cooling Fan
VS-616HII Model CIMR	- 0.4B	Model	QM10TB-H	RM10TA-H	JPCA-C242	JPAC-C231-□□	—
		Code	STR000197	SID000360	ETC00771X	ETC00760X-S□□XX	—
		Q' ty	1	1	1	1	—
	- 0.75B	Model	MG15G6EL1	RM10TA-H	JPCA-C242	JPAC-C231-□□	—
		Code	STR000152	SID000360	ETC00771X	ETC00760X-S□□XX	—
		Q' ty	1	1	1	1	—
	- 2.2B	Model	MG30G6EL1	D10VD60	JPAC-C244	JPAC-C231-□□	—
		Code	STR000198	SID000288	ETC00773X	ETC00760X-S□□XX	—
		Q' ty	1	3	1	1	—
	- 3.7B	Model	MG50G6EL1	D10VD60	JPAC-C244	JPAC-C231-□□	—
		Code	STR000199	SID000288	ETC00773X	ETC00760X-S□□XX	—
		Q' ty	1	3	1	1	—
	- 5.5B	Model	MG75G2CL1	100L6P41	JPAC-C246	JPAC-C231-□□	4715PS-22T-B30-07
		Code	STR000195	SID000291	ETC00775X	ETC00760X-S□□XX	FAN00121
		Q' ty	3	1	1	1	1
	- 7.5B	Model	MG100G2CL1	100L6P41	JPAC-C246	JPAC-C231-□□	4715PS-22T-B30-07
		Code	STR000200	SID000291	ETC00775X	ETC00760X-S□□XX	FAN00121
		Q' ty	3	1	1	1	1

*If braking function (optional) is not provided, base drive board is not required

†□□ of the control PC board type name shows the type of function

Renewal board should have the same model name suffix as that of the board in use.

‡XX of Code No for the control PC board indicates the revision number of the control PC board

New board should have the same code suffix number or larger than that of the board being replaced

MEMO

上正科技有限公司
購買、維修 此手冊零組件
電話： 037-466333
Email: service@repairtw.com
Line id: @zzzz
www.repairtw.com

TRANSISTOR INVERTER

Varispeed™ 616H II

200 TO 230 V, 0.4 TO 7.5 kW (0.5 TO 10 HP), 1 TO 10 kVA

上正科技有限公司

購買、維修 此手冊零組件

電話： 037-466333

Email: service@repairtw.com

Line id: @zzzz

www.repairtw.com



A Better Tomorrow for Industry through Automation

YASKAWA Electric Mfg. Co., Ltd.

TOKYO OFFICE Ohtemachi Bldg., 1-6-1 Ohtemachi, Chiyoda-ku, Tokyo, 100 Japan
Phone (03) 3284-9111, -9145 Telex YASKAWA J33530 Fax (03) 3284-9034

SEOUL OFFICE Seoul Center Bldg., 91-1, So Kong-Dong, Chung-Ku, Seoul, Korea
Phone (02) 776-7844 Fax (02) 753-2639

SINGAPORE OFFICE CPF Bldg., 79 Robinson Road No. 24-03, Singapore 0106
Phone 2217530 Telex (87) 24890 YASKAWA RS Fax (65) 224-5854

TAIPEI OFFICE Union Commercial Bldg., 137, Nanking East Road, Sec. 2, Taipei, Taiwan
Phone (02) 507-7065, -7732 Fax (02) 506-3837

YASKAWA ELECTRIC AMERICA, INC.. SUBSIDIARY

Chicago Office (Head Office) 3160 MacArthur Blvd., Northbrook, Illinois 60062-1917, U.S.A.
Phone (708) 291-2340, 291-2348 Telex (230) 270197 YSKW YSNC NBRK Fax (708) 498-2430, 480-9731

Los Angeles Office 7341 Lincoln Way, Garden Grove, California 92641, U.S.A.
Phone (714) 894-5911 Telex (230) 678396 YASKAWAUS TSTN Fax (714) 894-3258

New Jersey Office 30 Two Bridges Road, Fairfield, New Jersey 07006, U.S.A.
Phone (201) 575-5940 Fax (201) 575-5947

YASKAWA ELECTRIC EUROPE GmbH. SUBSIDIARY
Niederhöchstädter Straße 71-73, W 6242 Kronberg-Oberhöchstädt, Germany
Phone (06173) 640071, 640072, 640073 Telex 415660 YASE D Fax (06173) 68421

YASKAWA ELETRICO DO BRASIL COMERCIO LTDA SUBSIDIARY
Av. Brig. Faria Lima, 1664-cj 721/724, Pinheiros, São Paulo-SP, Brasil CEP-01452
Phone (011) 813-3933, 813-3694 Telex (011) 82669 YSKW BR Fax (011) 815-8795